


# FIFOTRACK COMMAND LIST

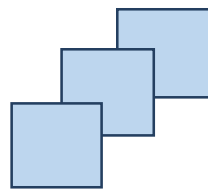


Model: A300/A500

Version: V1.8

[www.fifotrack.com](http://www.fifotrack.com)



## Copyright and Disclaimer

- © All copyrights belong to Shenzhen fifotrack Solution Co., Ltd. You are not allowed to revise, copy or spread this file in any form without consent of fifotrack.
- ©  is trademark of fifotrack, protected by law.
- © Please read this user guide carefully before installation to avoid any possible personal injury or property loss.

## Document History

Version	Revision Date	Author	Detail
V1.8	Nov 9, 2020	Vito Hu	Add <u>S09</u> , <u>S13</u> command Add ultrasonic sensor option in <u>B34</u> , <u>B80</u> , <u>B81</u> , <u>B82</u>
V1.7	Sep 29, 2019	Vito Hu	Modify <u>B33</u> , <u>B96</u> commands Delete <u>B15</u> command Delete <u>Enter Sleep</u> , <u>Wake Up</u> alarm code
V1.6	Dec 28, 2018	Vito Hu	Modify <u>B04</u> command: add <u>roam accoff tmr</u> and <u>roam parking tmr</u> fields
V1.5	Dec 11, 2018	Vito Hu	Add <u>B25</u> , <u>B34</u> , <u>B45</u> , <u>B46</u> , <u>C08</u>
V1.4	Sep 29, 2018	Vito Hu	Add <u>action=4</u> mode for <u>B12</u> command
V1.3	Sep 22, 2018	Vito Hu	Add <u>B98</u> command; Add <u>action=3</u> mode for <u>B12</u> command
V1.2	July 1, 2018	Vito Hu	Add <u>B99</u> , <u>F11</u> command, delete <u>Appendix B</u>
V1.1	May 7, 2016	Vito Hu	Initial Version

## Contents

<b>Document History .....</b>	<b>3</b>
<b>1 GPRS Command Format .....</b>	<b>7</b>
<b>2 SMS Command Format.....</b>	<b>8</b>
<b>3 Serial port (COM) Command Format .....</b>	<b>9</b>
<b>4 Command Writing Specification .....</b>	<b>10</b>
<b>5 Command List .....</b>	<b>11</b>
B00 – Setting GPRS Parameters.....	11
B01 – Setting GPRS APN Parameters .....	11
B02 – Setting GPRS Link Protocol .....	12
B03 – Setting Tracking Time Interval .....	12
B04 – Setting Roaming Tracking Time Interval .....	12
B05 – Setting Distance Tracking Interval .....	13
B07 – Setting the Direction Change Upload .....	13
B08 – Setting Speeding Alarm .....	14
B10 – Setting SMS Password .....	14
B11 – Setting SOS Number .....	15
B12 – Output Control .....	15
B13 – Pulse Output Control .....	16
B14 – Setting SMS Time Zone .....	16
B16 – Setting Initial Mileage.....	17
B17 – Clear Blind Data .....	17
B18 – Setting in-port Working Mode.....	17
B19 – Setting Circle geo-fence .....	18
B21 – Setting Fatigue Driving .....	19
B22 – Setting Maximum Parking Time .....	19
B23 – Setting Alarm Action.....	19
B24 – Setting Complicated Alarm Action.....	20
B25 – Setting SMS Timing Tracking .....	21
B26 – Setting Alarm SMS Head String .....	22
B27 – Setting Parameters of Harsh Acceleration Alarm .....	22
B28 – Setting Parameters of Harsh Braking Alarm .....	22

B29 – Setting Sensitivity of Motion Sensor .....	23
B31 – Setting SOS Number Attribute.....	23
B33 – Setting Maximum Idle Time .....	24
B34 – Setting Voltage Range for AD Port.....	24
B37 – Setting Digital Temperature Number.....	25
B38 – Setting High/Low Temperature Alarm .....	26
B39 – Delete Digital Temperature Sensor.....	27
B40 – Retrieve Temperature Sensor Data.....	27
B42 – Authorizing RFID/iButton Tag(s) .....	27
B43 – Delete Authorized RFID/iButton Tag(s).....	28
B44 – Retrieve RFID/iButton Tag(s) Authorization .....	29
B45 – RFID/iButton/Fingerprint Optional Function.....	29
B46 – Setting Passenger Mode for RFID/iButton/Fingerprint .....	30
B80 – Setting Fuel Theft/Filling Alarm.....	30
B81 – Setting Fuel Level Alarm .....	31
B82 – Enable/Disable Fuel Consumption Statistics .....	32
B90 – Reset Tracker or Module.....	33
B91 – Setting Parameters to Default .....	33
B94 – Turn on/off LED Display .....	33
B96 – Enable/Disable Vibration Alarm.....	34
B98 – Setting Lower Power Parameters .....	34
B99 – OTA using FTP Server .....	35
C01 – Retrieve Position Information.....	36
C02 – Retrieve Firmware/Hardware Version, SN, IMEI .....	37
C03 – Retrieve Supply Power Status.....	37
C04 – Retrieve Parameter Setting .....	37
C05 – Retrieve Installation Status of Ultrasonic Fuel Sensor .....	38
C06 – Retrieve Basic Information of Tracker.....	38
C08 – Retrieving AD voltage .....	39
D05 – Photographing.....	39
D06 – Retrieve Photo Data .....	40
D07 – Timing Photographing.....	41
F11 – Display Setting .....	41
S09 – Setting GPRS Heartbeat Interval .....	42



---

S13 – Switching A02 Package Format .....	43
<b>Appendix A - Alarm Code and Alarm Parameter .....</b>	<b>44</b>

# 1 GPRS Command Format

**GPRS uplink (i.e.: Data is sent from tracker to platform) command format:**

\$\$<pack-len>,<ID>,<work-no>,<cmd-code>,<cmd-para>\*<checksum>\r\n

**GPRS downlink (i.e.: Data is sent form platform to tracker) command format:**

##<pack-len>,<ID>,<work-no>,<cmd-code>,<cmd-para>\*<checksum>\r\n

## Remarks:

- ⦿ Comma (,) is used to separate data fields, and it is necessary. There is no space before or after comma.
- ⦿ pack-len: Package Length, decimal string format, the field of *pack-len* is {,<ID>,<work-no>,<cmd-code>,<cmd-para>}, be careful, comma(,) in front of *ID* included.
- ⦿ ID: Tracker ID, default IMEI.
- ⦿ work-no: working number, hexadecimal string format, cyclic accumulation from 1 to 0xFFFF.
- ⦿ cmd-code: Command code, or specification of data type.
- ⦿ cmd-para: parameter or description of *cmd-code*, which is described in the following chapters.
- ⦿ checksum: checksum of package, 2 bytes hexadecimal string format, XOR of {<pack-len>,<ID>,<work-no>,<cmd-code>,<cmd-para>}.
- ⦿ \r\n: End of package, i.e. <CR><LF>.
- ⦿ Without specification, multi-byte binary data in *cmd-para* uses big endian format, i.e. Most Significant Byte first.

## 2 SMS Command Format

Sending SMS (from mobile to tracker) command format:

<password>,<cmd-code>,<cmd-para>

Reply SMS (from tracker to mobile) data format:

<cmd-code>,<proc-result>

01 password: SMS password, 6 digits, default "000000".

02 cmd-code: command code, the same as cmd-code field in GPRS command.

03 cmd-para: command parameter, the same as cmd-para field in GPRS command.

04 proc-result: command process result

    OK – Succeed.

05 SMS command with invalid password, or with incorrect format, no reply will be sent.



## 3 Serial port (COM) Command Format

Setting command format:

#<cmd-code>,<cmd-para><CR><LF>

Reply data format

#<cmd-code>,<proc-result><CR><LF>

cmd-code, cmd-para: the same as corresponding field of GPRS/SMS command.

proc-result: COM command procession result

OK – Succeed.

UNSUPPORT – Command not supported.

FAILED –Procession failed.

## 4 Command Writing Specification

- ⦿ Comma (,) is used to separate multi-field, there is no space before and after comma.
- ⦿ For command with multi parameters, field(s) can be empty, the corresponding parameter is set to default.
- ⦿ The following chapters describe cmd-code and cmd-para.
- ⦿ The “Retrieve” row in the following chapters describes the corresponding query command.

## 5 Command List

<b>B00 – Setting GPRS Parameters</b>	
Source	GPRS/COM/SMS
Description	<p>B00,&lt;svr_type&gt;,&lt;net_addr&gt;,&lt;net_port&gt;</p> <p>01 svr_type: server selection, 1--main server, 2--backup server; When the connection to main server cannot be reached, tracker will automatically connect to the backup server. This avoids data losses.</p> <p>02 net_addr: server IP or domain.</p> <p>03 net_port: server port.</p>
Reply	<p>B00,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B00,1, 47.88.35.165,10502</p> <p>01 Set main server: IP-47.88.35.165, port-10502.</p>
Retrieve	<p>C04,B00,&lt;svr_type&gt;</p> <p>01 svr_type: server selection, the same as <u>svr_type</u> field in setting command.</p>

<b>B01 – Setting GPRS APN Parameters</b>	
Source	GPRS/COM/SMS
Description	<p>B01,&lt;apn_name&gt;,&lt;apn_usr&gt;,&lt;apn_pwd&gt;</p> <p>01 apn_name: APN name.</p> <p>02 apn_usr: APN user name.</p> <p>03 apn_pwd: APN password.</p> <p>04 Leave <u>apn_usr</u>, <u>apn_pwd</u> field empty, if no APN username and APN password exist.</p> <p>05 Contact to local ISP for APN detail.</p>
Reply	<p>B01,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B01,cmnet</p> <p>01 Set APN name to “cmnet”, APN login username and password empty.</p>
Retrieve	C04,B01



## B02 – Setting GPRS Link Protocol

Source	GPRS/COM/SMS
Description	B02,<link_type> 01 link_type: Link protocol, value “TCP” or “UDP”. 02 default TCP protocol.
Reply	B02,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B02,TCP 01 Set link protocol to TCP.
Retrieve	C04,B02

## B03 – Setting Tracking Time Interval

Source	GPRS/COM/SMS
Description	B03,<basic_tmr>,<accoff_tmr>,<parking_tmr> 01 basic_tme: normal time interval, unit s. 02 accoff_tmr: time interval when ACC OFF, unit s, default 0s. 03 parking_tmr: time interval when parking, unit s, default 0s. 04 When both <u>accoff_tmr</u> and <u>parking_tmr</u> are set, <u>parking_tmr</u> will be ignored in actual usage.
Reply	B03,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B03,30 01 Set timing tracking interval to 30s, tracker uploads position data every 30s.
Retrieve	C04,B03

## B04 – Setting Roaming Tracking Time Interval

Source	GPRS/COM/SMS
Description	B04, <roam_basic_tmr>,<roam_accoff_tmr>,<roam_parking_tmr> 01 roam_basic_tmr: roaming time interval, unit s, default 0s. 02 roam_accoff_tmr: time interval when ACC OFF under roaming, unit s, default 0s. 03 roam_parking_tmr: time interval when parking under roaming, unit s, default 0s. 04 When both <u>roam_accoff_tmr</u> and <u>roam_parking_tmr</u> are set, <u>roam_parking_tmr</u> will be ignored in actual usage.



	<p>02 When both <u>B03</u> and <u>B04</u> (<i>roam basic tmr</i> != 0) are set, tracker uses below logic for uploading:</p> <ul style="list-style-type: none"> <li>☉ When roaming detected, tracker uploads GPRS using <u>B04</u> setting, according to ACC, moving/parking status</li> <li>☉ For non-roaming condition, tracker uploads GPRS using <u>B03</u> setting, according to ACC, moving/parking status</li> </ul>
Reply	<p>B04,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B04,3600</p> <p>01 Set timing tracking interval to 3600s while roaming.</p> <p>B04,3600,7200</p> <p>01 Setting timing tracking interval to 3600s when ACC ON, 7200s when ACC off, under roaming status</p>
Retrieve	C04,B04

## B05 – Setting Distance Tracking Interval

Source	GPRS/COM/SMS
Description	<p>B05,&lt;basic_dst&gt;</p> <p>01 basic_dst: Distance tracking interval, unit meter.</p> <p>02 Distance tracking is independent from timing tracking.</p>
Reply	<p>B05,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B05,100</p> <p>01 Set distance tracking to 100m.</p>
Retrieve	C04,B05

## B07 – Setting the Direction Change Upload

Source	GPRS/COM/SMS
Description	<p>B07,&lt;course&gt;</p> <p>01 course: direction change angle, unit degree, range 0--359, default 20.</p> <p>02 When <u>course</u> is set to 0, direction change upload is disabled.</p> <p>03 When driving direction change exceeds the setting value, tracker will upload a position data for supplement.</p>

Reply	B07,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B07,30 01 Set direction change angle to 30°.
Retrieve	C04,B07

## B08 – Setting Speeding Alarm

Source	GPRS/COM/SMS
Description	B08,<speeding>,<buz> 01 speeding: speed, unit km/h, range 0–300, default 0. 02 When <i>speeding</i> is set to 0, speeding alarm is disabled. 03 buz: 1—Enable buzzer when speeding; 0—Disable(default) 04 When <i>buz==1</i> , tracker controls buzzer via OUT2, till speed returns to normal
Reply	B08,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B08,90 01 Set speed limit to 90km/h; Disable buzzer
Retrieve	C04,B08

## B10 – Setting SMS Password

Source	GPRS/COM/SMS
Description	B10,<sms_pwd> 01 sms_pwd: SMS password, 6 digits, default “000000”.
Reply	B10,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B10,472627 01 Set SMS password to “472627”.  B10,47262A 01 Invalid command, because SMS password needs to be a 6 digits string.
Retrieve	C04,B10

## B11 – Setting SOS Number

Source	GPRS/COM/SMS
Description	B11,<sos_num1>,<sos_num2>,<sos_num3> 01 sos_num1, 2, 3: SOS numbers to be set; 3 numbers can be set at most. 02 Refer to <a href="#">B23</a> for the function of SOS number(s).
Reply	B11,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B11,15698210011,,15698210200 01 Set <u>sos_num1</u> to 15698210011, <u>sos_num2</u> to empty, <u>sos_num3</u> to 15698210200.
Retrieve	C04,B11

## B12 – Output Control

Source	GPRS/COM/SMS
Description	<p>B12,&lt;index&gt;,&lt;action&gt;,&lt;safe_speed&gt; 01 index: out port selection, value 1, 2, 3... etc.. 02 action: Output control, 0~output low level, 1~output high level. 03 safe_speed: speed limit, unit km/h, range 1~300; when this parameter is set to 0, or this field is empty, output control takes effect immediately; Other value, set the speed limit for output control. When the driving speed is lower than the speed limit, the output control takes effect.</p> <p>B12,&lt;index&gt;,&lt;action=3&gt;,&lt;en&gt;,&lt;ignore-tmr&gt; 01 When <u>action==3</u>, it is used to setting automatically OUTPUT control after ACC OFF; Operation on OUTPUT port is related to ACC status only 02 index: out port selection, value 1, 2, 3... etc.. 03 en: 1—Enable OUTPUT control after ACC OFF; 0—Disable; When <u>en==1</u>, tracker will active OUTPUT port which is specified by <u>index</u> field after ACC OFF 04 ignore-tmr: Waiting time after ACC OFF, till doing operation on OUTPUT; After ACC OFF, if ACC ON again within <u>ignore-tmr</u>, tracker does nothing on OUTPUT port; And tracker will active OUTPUT when ACC OFF time exceed <u>ignore-tmr</u>; Unit s, range [0, 200], default 0s, when <u>ignore-tmr==0</u>, tracker actives OUTPUT immediately after ACC OFF 05 When <u>en==0</u>, <u>ignore-tmr</u> field can be empty 06 The setting is valid for all time when ACC OFF, till close setting using <a href="#">B12</a> command</p> <p>B12,&lt;index&gt;,&lt;action==4&gt; 01 When <u>action==4</u>, it is used to setting automatically OUTPUT control after ACC OFF;</p>



	<p>Operation on OUTPUT port is related to ACC status only; The command is one-time valid for ACC OFF;</p> <p>02 index: out port selection, value 1, 2, 3... etc..</p>
Reply	<p>B12,&lt;err_code&gt;</p> <p>01 err_code: error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED –Processing failed.</p>
Example	<p>B12,1,1,20</p> <p>01 Set OUT1 to output high level when speed less than 20km/h.</p>
Retrieve	<p>Command: C04,B12</p> <p>Reply: B12,&lt;index&gt;,&lt;action=3&gt;,&lt;en&gt;,&lt;ignore-tmr&gt;</p>

### B13 – Pulse Output Control

Source	GPRS/COM/SMS
Description	<p>B13,&lt;index&gt;,&lt;on_time&gt;,&lt;off_time&gt;,&lt;pls_cnt&gt;</p> <p>01 index: out port specification, value 1, 2, 3... etc..</p> <p>02 on_time: Duration of high level, unit ms.</p> <p>03 off_time: Duration of low level, unit ms.</p> <p>04 pls_cnt: Pulse number.</p>
Reply	<p>B13,&lt;err_code&gt;</p> <p>01 err_code: error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED –Processing failed.</p>
Example	<p>B13,1,1000,1000,10</p> <p>01 Set OUT1 to output 10 pulse, whose high level duration 1000ms, low level duration 1000ms.</p>
Retrieve	UNSUPPORT

### B14 – Setting SMS Time Zone

Source	GPRS/COM/SMS
Description	<p>B14,&lt;tzone&gt;</p> <p>01 tzone: time zone, range [-12, 12].</p> <p>02 Default value of <u>tzone</u> is 0.</p> <p>03 When SMS time zone is set, all tracking/alarm SMS use <u>tzone</u> for date &amp; time.</p> <p>04 GPRS data uploading uses UTC-0 time zone.</p>
Reply	<p>B14,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p>



	UNSUPPORT – Command not supported. FAILED – Proccession failed.
Example	B14,-8
Retrieve	C04,B14

## B16 – Setting Initial Mileage

Source	GPRS/COM/SMS
Description	B16,<init_mile> 01 init_mile: initial mileage, unit meter, default 0m.
Reply	B16,<err_code> 01 err_code: error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED –Processing failed.
Example	B16 01 Set both initial mileage to 0
Retrieve	C04,B16 01 The retrieved value is current mileage, not the setting ones.

## B17 – Clear Blind Data

Source	GPRS/COM/SMS
Description	B17,<data_type> 01 data_type: blind data type. 1 – GPRS Blind. 2 – SMS blind. 3 – Both GPRS and SMS blind.
Reply	B17,<err_code> 01 err_code: proccession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Proccession failed.
Example	B17,3 01 Clear both GPRS and SMS blind data.
Retrieve	UNSUPPORT

## B18 – Setting in-port Working Mode

Source	GPRS/COM/SMS
Description	B18,<input>,<valid_mode>



	<p>01 input: in-port selection, 1--input1, 2--input2, etc..</p> <p>02 valid_mode: valid trigger mode, 0--low level valid, 1--high level valid.</p> <p>03 This command is supported for INPUT3 and INPUT4.</p>
Reply	<p>B18,&lt;err_code&gt;</p> <p>01 err_code: error code.</p> <p style="padding-left: 40px;">OK – Succeed.</p> <p style="padding-left: 40px;">UNSUPPORT – Command not supported.</p> <p style="padding-left: 40px;">FAILED –Processing failed.</p>
Example	<p>B18,3,1</p> <p>01 Set IN3 to high level valid mode.</p>
Retrieve	<p>C04,B18,&lt;input&gt;</p> <p>01 input: in-port selection, the same as <u>input</u> field in setting command.</p>

## B19 – Setting Circle geo-fence

Source	GPRS/COM/SMS
Description	<p>B19,&lt;index&gt;,&lt;flag&gt;,&lt;radius&gt;,&lt;lat&gt;,&lt;lon&gt;</p> <p>01 index: fence index, value 1~8, i.e.: 8 geo-fence can be set at most.</p> <p>02 flag: alarm flag</p> <p style="padding-left: 40px;">flag=1: Trigger alarm when exit fence.</p> <p style="padding-left: 40px;">flag=2: Trigger alarm when enter fence.</p> <p style="padding-left: 40px;">flag=3: Trigger alarm both enter and exit fence.</p> <p>03 radius: radius of circle geo-fence, unit meter.</p> <p>04 lat: latitude of center point, decimal string format.</p> <p>05 lon: longitude of center point, decimal string format.</p> <p>06 When <u>lat</u> and <u>lon</u> are empty, current latitude and longitude is used, while GPS valid signal is needed.</p> <p>07 When <u>flag</u>, <u>radius</u>, <u>lat</u>, <u>lon</u> are empty, delete goe-fence specified by <u>index</u>; When <u>index</u>=0 or empty, delete all.</p>
Reply	<p>B19,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p style="padding-left: 40px;">OK – Succeed.</p> <p style="padding-left: 40px;">UNSUPPORT – Command not supported.</p> <p style="padding-left: 40px;">FAILED – Procession failed.</p>
Example	<p>B19,1,3,200</p> <p>01 Set the first circle geo-fence, centre point: current location, radius: 200m, output alarm when both enter and exit fence.</p> <p>B19,1</p> <p>01 Delete 1# circle fence</p>
Retrieve	<p>C04,B19,&lt;index&gt;</p> <p>01 index: fence index, value 1~8, the same as <u>index</u> field in setting command.</p>

<b>B21 – Setting Fatigue Driving</b>	
Source	GPRS/COM/SMS
Description	<p>B21,&lt;drowsy_time&gt;,&lt;rest_time&gt;</p> <p>01 drowsy_time: Fatigue driving time, unit s, default 14400s.</p> <p>02 rest_time: Minimum rest time after fatigue driving, unit s, default 1200s.</p> <p>03 When <u>drowsy time</u> is set to 0, fatigue driving alarm is disabled.</p> <p>04 The field <u>rest time</u> can be empty, while the default value is used.</p> <p>05 When <u>drowsy time</u> and <u>rest time</u> are empty, both values are set to default.</p>
Reply	<p>B21,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p style="padding-left: 40px;">OK – Succeed.</p> <p style="padding-left: 40px;">UNSUPPORT – Command not supported.</p> <p style="padding-left: 40px;">FAILED – Procession failed.</p>
Example	<p>B21</p> <p>01 Set fatigue driving time to the default value 14400s, and minimum rest time to the default value 1200s.</p>
Retrieve	C04,B21

<b>B22 – Setting Maximum Parking Time</b>	
Source	GPRS/COM/SMS
Description	<p>B22,&lt;time&gt;</p> <p>01 time: Maximum parking time, unit s, default 0s, i.e. parking overtime alarm is disabled.</p> <p>02 When parking time exceeds preset value, a parking overtime alarm triggered.</p> <p>03 When auto speed is 0, it is regards as parking.</p>
Reply	<p>B22,&lt;err_code&gt;</p> <p>01 err_code: error code.</p> <p style="padding-left: 40px;">OK – Succeed.</p> <p style="padding-left: 40px;">UNSUPPORT – Command not supported.</p> <p style="padding-left: 40px;">FAILED –Processing failed.</p>
Example	<p>B22,1200</p> <p>01 Set maximum parking time to 1200s.</p>
Retrieve	C04,B22

<b>B23 – Setting Alarm Action</b>	
Source	GPRS/COM/SMS
Description	<p>B23,&lt;alm-code&gt;,&lt;GPRS&gt;&lt;SMS&gt;&lt;two-way-call&gt;&lt;monitor-call&gt;&lt;photo&gt;&lt;AN-idx&gt;</p> <p>01 alm-code: Alarm type, refer to <u>Appendix –A</u>.</p>

	<p>02 GPRS: Disable/enable GPRS uploading.</p> <p>03 SMS: Disable/enable SMS to SOS number.</p> <p>04 two-way-call: Disable/enable SOS number dialing under two-way conversation.</p> <p>05 monitor-call: Disable/enable SOS number dialing under monitor mode.</p> <p>06 photo: Disable/enable photographing, with resolution setting by <u>D07</u> command.</p> <p>07 AN-idx: Complicated action, value 1~6, which corresponds to <u>AN-idx</u> field in <u>B24</u> command; AN is composed of a serial command sets, performing user define operations; Refer to <u>B24</u> command for detail.</p> <p>08 When both <u>two-way-call</u> and <u>monitor-call</u> are set, <u>monitor-call</u> is valid, while <u>two-way-call</u> ignored.</p> <p>09 <u>two-way-call</u> or <u>monitor-call</u> is valid when SOS number set, refer to <u>B11</u> command for SOS number(s) setting.</p>
Reply	<p>B23,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p style="padding-left: 40px;">OK – Succeed.</p> <p style="padding-left: 40px;">UNSUPPORT – Command not supported.</p> <p style="padding-left: 40px;">FAILED – Procession failed.</p>
Example	<p>B23,2,110102</p> <p>01 Set action when SOS triggered:</p> <p style="padding-left: 40px;">a Sending GPRS alarm data to platform.</p> <p style="padding-left: 40px;">b Sending alarm SMS with <u>C01</u> format to SOS number.</p> <p style="padding-left: 40px;">c Dial SOS numbers under monitor mode.</p> <p style="padding-left: 40px;">d Perform operations which is defined by <u>B24</u></p>
Retrieve	<p>C04,B23,&lt;alm-code&gt;</p> <p>01 alm-code: Alarm type, refer to <u>Appendix-A</u>. The same as <u>alm-code</u> field in setting command.</p>

## B24 – Setting Complicated Alarm Action

Source	GPRS/COM/SMS
Description	<p>B24,&lt;AN-idx&gt;,'#oper-1',&lt;delay_t&gt;,'#oper-2',....</p> <p>01 The command defines complicated alarm action, "AN" for short; AN is used associated with <u>B23</u> setting. When both <u>AN-idx</u> field in <u>B23</u> command, and AN detail in <u>B24</u> are set, operation can be performed then.</p> <p>02 AN-idx: AN index, value 1~6, corresponds to 1~6 operation sets; It can be selected by <u>AN-idx</u> field in <u>B23</u> command.</p> <p>03 #oper-[1,2...]: Operation instruction, composed of a serial command(s). Maximum length of 64 bytes.</p> <p>04 delay_t: Delay time between adjoining operation, unit second. It means, tracker performs operations defined by <u>opera-1</u>, delay <u>delay t</u> seconds, then perform <u>opera-2</u></p> <p>05 The writing rule of <u>B24</u>:</p> <p style="padding-left: 40px;">a Single quotes in front of and behind <u>oper-x</u> are needed, which is used to define operation start</p>



	<p>b <u>oper-x</u> is composed of commands sets, it is written in “Serial port (COM) Command Format”. For example, ‘#B12,1,1’</p> <p>c <u>delay t</u> is written in digital directly, there is no single quote in front or behind</p> <p>06 The operation flow of AN action</p> <p>a Tracker detects alarm occurring.</p> <p>b Tracker checks whether <u>AN-idx</u> is selected in <u>B23</u>, and whether AN detail is set in <u>B24</u>.</p> <p>c When both <u>B23</u> and <u>B24</u> are set, tracker performs operation defined by <u>B24</u>.</p>
Reply	<p>B24,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B23,2,100003</p> <p>B24,3,'#B12,1,1',3,'#B12,1,0'</p> <p>01 Tracker will upload GPRS package, and perform AN3 when SOS detected.</p> <p>02 When SOS detected, tracker uploads GPRS alarm package, set OUT1 high level, delay 3s, and then set OUT1 low level.</p>
Retrieve	<p>C04,B24,&lt;AN-idx &gt;</p> <p>01 AN-idx: AN index, the same as <u>AN-idx</u> field in setting command</p>

## B25 – Setting SMS Timing Tracking

Source	GPRS/COM/SMS
Description	<p>B25,&lt;sms_interval&gt;,&lt;sos_list&gt;</p> <p>01 sms_interval: SMS Tracking interval, unit: s, default: 0s; when <u>sms interval=0</u>, disable SMS timing tracking</p> <p>02 The format of timing SMS is the same as <u>C01</u> reply</p> <p>03 sos_list: SOS number list, value 1, 2, 3 or the combination of them. Tracking SMS will be sent to the SOS number(s) defined by <u>sos list</u>; When <u>sos list</u> is empty, tracking SMS will be sent to #1 number by default;</p> <p>04 After setting SMS timing tracking, it is suggested to set SOS number(s) using <u>B11</u> command, to set time-zone using <u>B14</u> command.</p>
Reply	<p>B25,&lt;err_code&gt;</p> <p>01 err_code: error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED –Processing failed.</p>
Example	<p>B25,120,23</p> <p>01 Enable SMS timing tracking, and set interval to 120s, tracking SMS will be sent to #2 and #3 SOS numbers</p>
Retrieve	C04,B25

<b>B26 – Setting Alarm SMS Head String</b>	
Source	GPRS/COM/SMS
Description	B26,<alm-code>,<sms_string> 01 alm-code: Alarm type, refer to <a href="#">Appendix –A</a> . 02 sms_string: SMS head string, 16 bytes length at most. 03 Refer to <a href="#">Appendix-A</a> for default string.
Reply	B26,<err_code> 01 err_code: error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED –Processing failed.
Example	B26,2,HELP 01 Set SMS head string of SOS to “HELP”.
Retrieve	C04,B26,<alm-code> 01 alm-code: Alarm type, refer to <a href="#">Appendix –A</a> . The same as <a href="#">alm-code</a> field in setting command.

<b>B27 – Setting Parameters of Harsh Acceleration Alarm</b>	
Source	GPRS/COM/SMS
Description	B27,<speed_var>,<time_lmt> 01 speed_var: maximum acceleration speed, unit km/h, default 0. 02 time_lmt: hard acceleration detection time, unit s, default 0. 03 Refer to <a href="#">Appendix –A</a> for <a href="#">alm-code</a> of harsh accelerate
Reply	B27,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B27,40,2 01 Set hard acceleration parameters: 40km/h speed variation within 2s.
Retrieve	C04,B27

<b>B28 – Setting Parameters of Harsh Braking Alarm</b>	
Source	GPRS/COM/SMS
Description	B28,<speed_var>,<time_lmt> 01 speed_var: maximum decrease speed, unit km/h, default 0. 02 time_lmt: hard braking detection time, unit s, default 0. 03 When driving speed decrease beyond <a href="#">speed var</a> , tracker triggers hard braking alarm.



	04 Refer to <u>Appendix –A</u> for <u>alm-code</u> of harsh brake
Reply	B28,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	Refer to example in <u>B27</u>
Retrieve	C04,B28

## B29 – Setting Sensitivity of Motion Sensor

Source	GPRS/COM/SMS
Description	B29,<level> 01 level: sensitivity of motion sensor, value [0, 10]; the smaller value, the higher sensitivity
Reply	B29,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B29,5
Retrieve	C04,B29

## B31 – Setting SOS Number Attribute

Source	GPRS/COM/SMS
Description	B31,<sos-num>,<two-way-call>,<monitor>,<pos-sms> 01 Set SOS number attribute, refer to <u>B11</u> command for SOS number setting. 02 sos-num: SOS index, value 1, 2, 3, which corresponds to SOS number set by <u>B11</u> command. 03 two-way-call: attribute of two-way conversation. 04 monitor: attribute of monitor-mode conversation. 05 pos-sms: attribute of position SMS. 06 Description of attribute: two-way-call: tracker picks up incoming phone-call in two-way conversation mode. monitor: tracker picks up incoming phone-call in monitor mode. pos-sms: Tracker sends position SMS after incoming phone-call ends. Refer to <u>C01</u> command for SMS format. 07 When both <u>two-way-call</u> and <u>monitor</u> are set, <u>monitor</u> is valid, i.e.: tracker picks up phone-call in monitor mode. 08 When the command string has only <u>sos-num</u> field, default attribute is set to



	<p>corresponding SOS number.</p> <p>09 Default attribute of SOS number: <i>two-way-call</i> and <i>pos-sms</i>.</p>
Reply	<p>B31,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B31,1,1,1,1</p> <p>01 Set attribute of the first SOS number: tracker automatically picks up incoming phone-call under monitor mode, reply a position SMS.</p>
Retrieve	<p>C04,B31,&lt;sos-num&gt;</p> <p>01 sos-num: SOS index, value 1, 2, 3. The same as <i>sos-num</i> field in setting command.</p>

### B33 – Setting Maximum Idle Time

Source	GPRS/COM/SMS
Description	<p>B33,&lt;idle_time&gt;</p> <p>01 idle_time: maximum idle time, unit: s, default 0s. This parameter should be greater than 120s.</p> <p>02 idle definition: ACC ON, but no speed, which means engine running under idle mode.</p> <p>03 When idle mode detected, tracker starts idle time counter, and triggers <i>Idling Alarm</i> (<i>alm_code=35</i>), if counter exceeds <i>idle time</i>.</p>
Reply	<p>B33,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B33,600</p> <p>01 Set maximum idle time to 600s</p>
Retrieve	C04,B33

### B34 – Setting Voltage Range for AD Port

Source	GPRS/COM/SMS
Description	<p>B34,&lt;index&gt;,&lt;min_volt&gt;,&lt;max_volt&gt;,&lt;filter-option&gt;</p> <p>01 index: AD port index</p> <p><i>index==1/2</i>, AD1 or AD2</p> <p><i>index==3</i>, ultrasonic fuel sensor</p> <p>02 min_volt:</p> <p><i>index==1/2</i>: AD port voltage when external input is 0%, unit V</p> <p><i>index==3</i>: minimum measuring range for ultrasonic sensor, unit mm</p> <p>03 max_volt:</p>





	<p>index==1/2: AD port voltage when external input is 100%, unit V</p> <p>index==3: maximum measuring range for ultrasonic sensor, unit mm</p> <p>04 filter-option: filter option for AD sample data; <b>NOTE: For ultrasonic sensor, <u>filter-option</u> field ignored in actual usage</b></p> <p><u>filter-option</u>==0 (default): When external power exists, sample AD data and upload real-time; When external power disconnected, keeping the last sample value, and upload to server</p> <p><u>filter-option</u>==1: When ACC ON, sample AD data and upload real-time; When ACC OFF (maybe external power exists), keeping the last sample value, and upload to server</p> <p><u>filter-option</u>==2: upload AD sample data real-time, ignoring ACC and external power status</p> <p>05 Default value for AD input</p> <table border="1"> <thead> <tr> <th>port</th> <th>min_volt/V</th> <th>max_volt/V</th> <th>filter-option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>AD1</td> <td>0</td> <td>5</td> <td>0</td> <td>Get sample data according to external power status</td> </tr> <tr> <td>AD2</td> <td>0</td> <td>0</td> <td>0</td> <td>Real-time get sample data and upload</td> </tr> </tbody> </table>	port	min_volt/V	max_volt/V	filter-option	Description	AD1	0	5	0	Get sample data according to external power status	AD2	0	0	0	Real-time get sample data and upload
port	min_volt/V	max_volt/V	filter-option	Description												
AD1	0	5	0	Get sample data according to external power status												
AD2	0	0	0	Real-time get sample data and upload												
Reply	<p>B34,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>    OK – Succeed.</p> <p>    UNSUPPORT – Command not supported.</p> <p>    FAILED – Procession failed.</p>															
Example	<p>B34,1,0,5.0</p> <p>01 Setting voltage range of AD1 to [0,5]V, getting sample data when external power exist, keeping sample data when external power disconnected</p> <p>B34,3,0,1000</p> <p>01 Setting ultrasonic fuel sensor measuring range 0—1000mm</p>															
Retrieve	C04,B34,<index>															

### B37 – Setting Digital Temperature Number

Source	GPRS/COM/SMS
Description	<p>B37</p> <p>01 Tracker supports multiple digital temperature sensors; When more than one sensor is installed, it is suggested to set sensor’s number.</p> <p>02 When only one sensor is installed, tracker uses default #1 as sensor’s number</p> <p>03 Method to set sensor’s number:</p> <p>    a Connect one sensor to tracker, send <u>B37</u> command, tracker set sensor’s number automatically, and reply setting result in command’s reply</p> <p>    b Disconnect the sensor, whose number has been set; Connect another sensor to tracker, use <u>B37</u> command to set newly added sensor’s number</p>

	<p>c Repeat the operation above, if there are more sensor</p> <p>d NOTE: When setting sensor's number, only one sensor is allowed to connect to tracker</p> <p>04 When sensors' numbers are set, tracker will arrange temperature data in the setting sequence</p> <p>05 It is suggested to reset number, when some sensors are removed.</p>
Reply	<p>B37,&lt;t_sensor_sn&gt;</p> <p>01 t_sensor_sn: Sensor's number which is set automatically</p> <p>[1,8] – Setting succeed, the value is the sensor's number</p> <p>[FULL] – The number of sensors exceed</p> <p>FAILED – Setting failed, error connection, or more than one sensor are connected</p>
Example	
Retrieve	UNSUPPORT

## B38 – Setting High/Low Temperature Alarm

Source	GPRS/COM/SMS
Description	<p>B38,&lt;t_sensor_sn&gt;,&lt;high_temp&gt;,&lt;low_temp&gt;</p> <p>01 t_sensor_sn: sensor's number, refer to <a href="#">B37</a> command; When one sensor is installed, <u>t_sensor_sn</u>==1</p> <p>02 high_temp: High temperature threshold, unit °C; If this field is empty, high temperature alarm is disabled.</p> <p>03 low_temp: Low temperature threshold, unit °C; If this field is empty, Low temperature alarm is disabled.</p> <p>04 When <u>t_sensor_sn</u>, <u>high_temp</u>, <u>low_temp</u> fields are empty, all sensors' high/low temperature alarm are disabled.</p> <p>05 Refer to <a href="#">Appendix-A</a> for <u>alm-code</u> and <u>alm-para</u> of high/low temperature alarm</p>
Reply	<p>B38,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B38,1,-10,-20</p> <p>01 Setting #1 sensor's parameters, high temperature threshold: -10°C, low temperature threshold: -20°C</p> <p>B38,1,-10</p> <p>01 Setting #1 sensor's parameters, high temperature threshold: -10°C, low temperature threshold: disable</p> <p>B38,1,,,-20</p> <p>01 Setting #1 sensor's parameters, high temperature threshold: disable, low temperature</p>



	threshold: -20°C  B38,1 01 Disable #1 sensor's high and low temperature alarm
Retrieve	C04,B38,<t_sensor_sn>

### B39 – Delete Digital Temperature Sensor

Source	GPRS/COM/SMS
Description	B39,<t_sensor_sn> 01 When multiple sensors are installed, and some ones need to be removed, this command can be used. In actual usage, remove sensor first, then send <u>B39</u> command 02 t_sensor_sn: sensor's number, refer to <u>B37</u> command; When one sensor is installed, <u>t_sensor_sn</u> =1; When <u>t_sensor_sn</u> field is empty, remove all sensors
Reply	B39,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	
Retrieve	UNSUPPORT

### B40 – Retrieve Temperature Sensor Data

Source	GPRS/COM/SMS
Description	B40 01 The command is used for testing after installation. Tracker replies all sensors' data.
Reply	B40,<tsensor1_temp> <tsensor2_temp>.... <tsensorN_temp> 01 The reply indicates the number of sensor, and sensors' data 02 N: The number of digital temperature sensor 03 tsensor[1,N]_temp: Temperature data, unit °C; Data is arranged by the number set by <u>B37</u> ; ' ' is used to separate neighboring data
Example	
Retrieve	UNSUPPORT

### B42 – Authorizing RFID/iButton Tag(s)

Source	GPRS/COM/SMS
Description	B42,<rfid_num1>,<rfid_num2>...<rfid_numN> 01 rfid_num[1,N]: RFID/iButton tag number to be authorized. For iButton tag, whose number is hexadecimal, use '#' in front



	<p>02 To authorize RFID/iButton tags in batches, send <b>B42</b> only, with <i>rdid_num1</i>, <i>rfid_num2</i> ... <i>rfid_numN</i> empty. After parsed the command, tracker will regard all read RFID tags as authorized ones in 3 minutes. During this 3 minutes, tracker will not generate “Login”, “Log Out” or “Illegal Login” alarm when tag(s) read.</p> <p>03 Refer to <a href="#">Appendix A</a> for <i>alm-code</i> of “Login”, “Log Out” and “Illegal Login”.</p> <p>04 After authorized tag(s) set, tracker will generate “Login”, “Log Out” or “Illegal Login” alarm when tag read; Refer to user guide for detail.</p> <p>05 If no tag(s) authorized, tracker will not generate “Illegal Login”.</p>
Reply	<p>B42,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B42,1234567,1234568,1234569</p> <p>01 Authorize 3 RFID/iButton tags, whose number 1234567,1234568,1234569</p> <p>B42,1234567,1234568,#1234569</p> <p>01 Authorize 3 RFID/iButton tags, whose number 1234567,1234568,0x1234569</p> <p>B42</p> <p>01 Start batch tags authorizing, tracker regards tags, which are read in the following 3 minutes, as authorized ones.</p>
Retrieve	UNSUPPORT

## B43 – Delete Authorized RFID/iButton Tag(s)

Source	GPRS/COM/SMS
Description	<p>B43,&lt;ALL&gt;/&lt;rfid_num1&gt;,&lt;rfid_num2&gt;...&lt;rfid_numN&gt;</p> <p>01 rfid_num[1,N]: RFID/iButton tag number to be deleted. For iButton tag, whose number is hexadecimal, use ‘#’ in front</p> <p>02 B43,ALL: Delete all authorized tag(s).</p> <p>03 To delete tags in batches, send <b>B43</b> only, with <i>rfid_num1</i>, <i>rfid_num2</i>...<i>rfid_numN</i> empty, tracker will delete tags, which are read in 3 minutes. During this 3 minutes, tracker will not generate “Login”, “Log Out” or “Illegal Login” alarm when tag(s) read.</p>
Reply	<p>B43,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B43,1234567,1234568,1234569</p> <p>01 Delete 3 authorized RFID tags, whose number 1234567,1234568,1234569.</p> <p>B43,1234567,1234568,#1234569</p>



	01 Delete 3 authorized RFID tags, whose number 1234567,1234568,0x1234569.  B43 01 Start batch operation, tracker delete tags, which are read in the following 3 minutes.
Retrieve	UNSUPPORT

### B44 – Retrieve RFID/iButton Tag(s) Authorization

Source	GPRS/COM/SMS
Description	B44,<rfid_num1>,<rfid_num2>...<rfid_numN> 01 rfid_num[1,N]: RFID/iButton tag number to be retrieved. For iButton tag, whose number is hexadecimal, use '#' in front 02 Maximally, five tags are support in the retrieving operation
Reply	B44,<rfid_num1>:<aut1>,<rfid_num2>:<aut2>,...<rfid_numN>:<autN> 01 rfid_num[1,N]: RFID/iButton tag number to be retrieved. 02 aut[1,N]: Authorization status, 0~unauthorized, 1~ authorized
Example	
Retrieve	UNSUPPORT

### B45 – RFID/iButton/Fingerprint Optional Function

Source	GPRS/COM/SMS
Description	B45,<acc-off-logout>,<buz-tip>,<acc-on-no-logout> 01 acc-off-logout: 1(default) – Force logout When ACC OFF; 0—Keeping login status when ACC OFF. After setting <u>acc-off-logout==1</u> , tracker will set current status to logout, and trigger “Log out” alarm when ACC OFF 02 buz-tip: Enable/Disable buzzer function for reminder function; 1—Enable, 0—Disable. Tracker will beep for reminder under below condition: a Under logout status, when ACC ON, buzzer beeps to remind swiping card to log in b Log in, buzzer beeps once c Log out, buzzer beeps twice 05 acc-on-no-logout: 1 (default) – Tracker keeps login status during ACC ON period; 0—Tracker will generate logout alarm even under ACC ON condition. <u>acc-on-no-logout==1</u> : Tracker does noting when swiping the same card, while generates “Log in” alarm when swiping different card, with new card ID in GPRS package <u>acc-on-no-logout==0</u> : Tracker generates “Log out” alarm when swiping the same card, while generates “Log out” alarm with old card ID, “Log in” alarm with new ID
Reply	B45,<err_code> 01 err_code: procession error code. OK – Succeed.

	UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	
Retrieve	C04,B45

## B46 – Setting Passenger Mode for RFID/iButton/Fingerprint

Source	GPRS/COM/SMS
Description	<p>B46,&lt;enable&gt;,&lt;filter-tmr&gt;,&lt;keeping-tmr&gt;</p> <p>01 Tracker supports two working mode, driver management and passenger mode, when using RFID/iButton/finger. <b>B46</b> command is use to set passenger mode.</p> <p>02 enable: 0~Disable(default); 1~Enable</p> <p>03 filter-tmr: filtering time for repeating swiping, unit s, default 0s. During this period, tag ID will be uploaded once till <u>filter-tmr</u> timeout. When <u>filter-tmr==0</u>, no filtration to repeating tag ID</p> <p>04 keeping-tmr: tag ID keeping time, unit s; During this period, tag ID will be uploaded within each GPRS package; when <u>keeping-tmr==0</u>, tag ID will be uploaded once</p> <p>05 Working process of passenger mode</p> <p>a After tag swiped, tracker sends normal GPRS position data with tag ID during <u>keeping-tmr</u> period. And tag ID will be empty after <u>keeping-tmr</u> seconds</p> <p>b When the same tag swiped repeatedly, tracker distinguishes as one during <u>filter-tmr</u> second, and keeps sending GPRS package with tag ID during <u>keeping-tmr</u> seconds</p> <p>06 When setting passenger mode, GPRS data package is normal position one after tag swiped.</p>
Reply	<p>B46,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	
Retrieve	C04,B46

## B80 – Setting Fuel Theft/Filling Alarm

Source	GPRS/COM/SMS
Description	<p>B80,&lt;ad-idx&gt;,&lt;theft-percentage&gt;,&lt;filling -percentage&gt;,&lt;use-acc&gt;</p> <p>01 The command is used for AD fuel sensor or ultrasonic fuel sensor; Besides, it is valid on regular tank only at present.</p> <p>02 ad-idx:</p> <p><u>ad-idx==0</u>, disable fuel theft/filling function</p> <p><u>ad-idx==1/2</u>: AD channel which connects to AD fuel sensor</p>

	<p><u>ad-idx==3</u>: ultrasonic fuel sensor</p> <p>03 theft-percentage: Fuel theft percentage, unit %, tracker will send alarm when the fuel level decrement exceeds the setting value. If <u>theft-percentage==0</u> or field empty, disable fuel theft alarm.</p> <p>04 filling-percentage: Fuel filling percentage, unit %, tracker will send alarm when the fuel level increment exceeds the setting value. If <u>filling-percentage==0</u> or field empty, disable fuel filling alarm.</p> <p>05 use-acc: Whether tracker connects to ACC or not. To get better calculation result, it is suggested to connect IN2 to ACC. If <u>use-acc</u> field empty, by default, it is regarded that ACC connected.</p>
Reply	<p>B80,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>    OK – Succeed.</p> <p>    UNSUPPORT – Command not supported.</p> <p>    FAILED – Procession failed.</p>
Example	<p>B80,1,5</p> <p>01 Enable fuel theft alarm calculated based on AD1; When fuel level decrement exceed 5%, tracker sends theft alarm</p> <p>02 Disable fuel filling alarm</p> <p>03 IN2 connects to ACC</p> <p>B80,3,10,25,1</p> <p>01 Setting 10% theft alarm, 25% filling alarm for ultrasonic fuel sensor</p>
Retrieve	C04,B80

## B81 – Setting Fuel Level Alarm

Source	GPRS/COM/SMS
Description	<p>B81,&lt;ad-idx&gt;,&lt;low-percentage&gt;,&lt;high-percentage&gt;</p> <p>01 The command is used for AD fuel sensor or ultrasonic fuel sensor; Besides, it is valid on regular tank only at present.</p> <p>02 ad-idx:</p> <p>    <u>ad-idx==0</u>, disable fuel level detecting function</p> <p>    <u>ad-idx==1/2</u>: AD channel which connects to AD fuel sensor</p> <p>    <u>ad-idx==3</u>: ultrasonic fuel sensor</p> <p>03 low-percentage: Percentage of low fuel level, unit %, tracker will send alarm when the fuel level is lower than the setting value. If <u>low-percentage==0</u> or field empty, disable low fuel level detection.</p> <p>04 high-percentage: Percentage of high fuel level, unit %, tracker will send alarm when the fuel level is higher than the setting value. If <u>high-percentage==0</u> or field empty, disable high fuel level detection.</p>
Reply	<p>B81,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p>



	<p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B81,1,15,80</p> <p>01 Enable low and high fuel level detection calculated based on AD1</p> <p>02 When fuel level is lower than 15%, tracker sends alarm</p> <p>03 When fuel level is higher than 80%, tracker sends alarm</p> <p>B81,3,10,85</p> <p>01 Setting 10% low level alarm, 85% high level alarm for ultrasonic fuel sensor</p>
Retrieve	C04,B81

## B82 – Enable/Disable Fuel Consumption Statistics

Source	GPRS/COM/SMS
Description	<p>B82,&lt;ad-idx&gt;,&lt;use-acc&gt;,&lt;add-theft&gt;,&lt;clear&gt;</p> <p>01 The command is used for AD fuel sensor or ultrasonic fuel sensor; Besides, it is valid on regular tank only at present.</p> <p>02 ad-idx:</p> <p><u>ad-idx==0</u>, disable fuel consumption statistics</p> <p><u>ad-idx==1/2</u>: AD channel which connects to AD fuel sensor</p> <p><u>ad-idx==3</u>: ultrasonic fuel sensor</p> <p>03 use-acc: Whether tracker connects to ACC or not. To get better calculation result, it is suggested to connect IN2 to ACC. If <u>use-acc</u> field empty, by default, it is regarded that ACC connected.</p> <p>04 add-theft: 1-- The amount of oil reduced by theft is added to total fuel consumption (default); 0-- The amount of oil reduced by theft is excluded from total fuel consumption.</p> <p>05 clear: 0—Keep current fuel consumption data unchanged; 1—Clear current consumption data, and calculated from 0</p> <p>06 After fuel consumption statistics enabled, fuel consumption data is packed in <u>fuel_consume</u> field in GPRS protocol.</p>
Reply	<p>B82,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B82,1,1,1,1</p> <p>01 Enable fuel consumption statistics calculated based on AD1; tracker connects to ACC via IN2; All amount, including fuel theft amount, will be statistics into total consumption; After commands sent, tracker clear current consumption data, and re-calculates from 0.</p> <p>B82,3,1,1,1</p>



	01 Enable fuel consumption statistics for ultrasonic fuel sensor
Retrieve	C04,B82 Reply: B82,<ad-idx>,<use-acc>,<add-theft>

## B90 – Reset Tracker or Module

Source	GPRS/COM/SMS
Description	B90,< select > 01 select: option =1: Reset tracker. =2: Reset GPS module. =3: Reset GSM module.
Reply	B90,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B90,1 01 Reset tracker.
Retrieve	UNSUPPORT

## B91 – Setting Parameters to Default

Source	GPRS/COM/SMS
Description	B91 01 After command is set, all system parameters (except SMS password) are set to default.
Reply	B91,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B91
Retrieve	UNSUPPORT

## B94 – Turn on/off LED Display

Source	GPRS/COM/SMS
Description	B94,<led-on> 01 led-on: 1--turn on LED, 0--turn off LED. 02 Default, <i>led-on</i> =1.



Reply	B94,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B94 01 Set LED to default: turn on.
Retrieve	C04,B94

## B96 – Enable/Disable Vibration Alarm

Source	GPRS/COM/SMS
Description	B96,<enable>,<option> 01 enable: 0~Disable vibration alarm(default); 1~enable vibration alarm 02 option: Detection option for vibration alarm <i>option</i> ==1: Trigger alarm when vibration detected and ACC OFF(default) <i>option</i> ==0: Trigger alarm when vibration detected 03 Using <u>B29</u> command to set sensitivity of motion sensor
Reply	B96,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B96,1 01 Enable vibration alarm
Retrieve	C04,B96

## B98 – Setting Lower Power Parameters

Source	GPRS/COM/SMS
--------	--------------



Description	<p>B98,&lt;low_pwr_v&gt;,&lt;low_recovery_v&gt;,&lt;control&gt;</p> <p>01 The command is used to set the parameters of low external power alarm</p> <p>02 low_pwr_v: Low power alarm voltage, unit V; When external power input is lower than <u>low_pwr_v</u>, tracker sends “Low Ext-Power” alarm, and cuts off power supply if <u>control==1</u>, in order to protect auto battery.</p> <p>03 low_recovery_v: External power recovery voltage, unit V; When external power input is higher than <u>low_recovery_v</u>, it regards that external power is normal; tracker clears “Low Ext-Power” flag, and restore external power supply if <u>control==1</u>.</p> <p>04 control: 1—cut off external power supply when external input is lower than <u>low_pwr_v</u>, and restore supply when external input higher than <u>low_recovery_v</u>, it is used to protect auto battery; 0(default)—Disable auto battery protection.</p> <p>05 It is suggested to set parameters which <math>(low\_recovery\_v - low\_pwr\_v) \geq 0.5V</math></p> <p>06 Default settings for 12V or 24V auto battery, as below table:</p> <table border="1" data-bbox="448 730 1278 862"> <thead> <tr> <th></th> <th>low_pwr_v</th> <th>low_recovery_v</th> </tr> </thead> <tbody> <tr> <td>12V Auto Battery</td> <td>11.5V</td> <td>12.5V</td> </tr> <tr> <td>24V Auto Battery</td> <td>23.5V</td> <td>24.5V</td> </tr> </tbody> </table> <p>07 <b>The command is suitable for A500 only, while A300 doesn't support</b></p>		low_pwr_v	low_recovery_v	12V Auto Battery	11.5V	12.5V	24V Auto Battery	23.5V	24.5V
	low_pwr_v	low_recovery_v								
12V Auto Battery	11.5V	12.5V								
24V Auto Battery	23.5V	24.5V								
Reply	<p>B98,&lt;err_code&gt;</p> <p>01 err_code: procession error code.</p> <p style="padding-left: 40px;">OK – Succeed.</p> <p style="padding-left: 40px;">UNSUPPORT – Command not supported.</p> <p style="padding-left: 40px;">FAILED – Procession failed.</p>									
Example	<p>B98,11.5,12.5</p> <p>01 Setting low external threshold to 11.5V, and recovery voltage to 12.5V, auto battery protection is disabled, tracker is always powered from external supply.</p> <p>B98,0,0,1</p> <p>01 Setting adaptive low external parameters, tracker judges voltage automatically, and cuts off when low external input.</p>									
Retrieve	<p>C04,B98</p>									

## B99 – OTA using FTP Server

Source	<p>GPRS/COM/SMS</p>						
Description	<p>B99,&lt;file_name&gt;,&lt;option&gt;,&lt;ftp_address&gt;,&lt;ftp_port&gt;,&lt;ftp_loginid&gt;,&lt;ftp_loginpwd&gt;,&lt;apn&gt;,&lt;apn_name&gt;,&lt;apn_pwd&gt;</p> <p>01 file_name: file name for OTA, should be “xxx.bin” format</p> <p>02 option: option for OTA, when the field empty, using default setting</p> <table border="1" data-bbox="405 1821 1401 1991"> <thead> <tr> <th>option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0(default)</td> <td>Normal OTA, tracker check whether <u>file_name</u> match current version or not</td> </tr> <tr> <td>1</td> <td>Mandatory OTA, tracker doesn't check <u>file_name</u></td> </tr> </tbody> </table> <p>03 ftp_address: FTP server address, default 47.88.17.17</p>	option	Description	0(default)	Normal OTA, tracker check whether <u>file_name</u> match current version or not	1	Mandatory OTA, tracker doesn't check <u>file_name</u>
option	Description						
0(default)	Normal OTA, tracker check whether <u>file_name</u> match current version or not						
1	Mandatory OTA, tracker doesn't check <u>file_name</u>						



	<p>04 ftp_port: FTP server port, default 21</p> <p>05 ftp_loginid, ftp_loginpwd: FTP login user-name and password, when fields empty, using default account on 47.88.17.17</p> <p>06 apn, apn_name, apn_pwd: APN setting for FTP connection, default, tracker using the same setting as <u>B01</u> command</p> <p>07 After <u>B99</u> command received, tracker matches <u>file_name</u> to current firmware version, and starts OTA according to result</p> <p>08 During OTA operation, tracker will disconnect from tracking server, stop timing uploading/photographing.</p> <p>09 The timeout for FTP OTA is 15mins, when exceed, tracker will restart automatically, and connect to tracking server</p> <p>10 External power connection is needed during OTA operation, it is used for tracking reboot after OTA finished</p>
Reply	<p>B99,&lt;err_str&gt;</p> <p>01 err_str: Error code, string format</p> <p>“Invalid BIN file” - <u>file_name</u> doesn’t match current firmware version</p> <p>“No ext-pwr, Please Connect in 15mins” – External power disconnect</p> <p>“The Same Version” – file_name has the same version to current firmware version</p> <p>“OK” – OTA start</p>
Example	<p>B99,300-V1.19.bin</p> <p>01 Start OTA, tracker will connect to 47.88.17.17:21, using default FTP account for file download</p> <p>B99,300-V1.19.bin,1, 120.24.95.123,9208,klone,klone@@2017</p> <p>01 Start OTA, tracker will connect to <u>120.24.95.123:9208</u>, and upgrade to “<u>300-V1.19.bin</u>”</p> <p>02 The login name and password of FTP server is “<u>klone</u>” and “<u>klone@@2017</u>”</p>
Retrieve	

## C01 – Retrieve Position Information

Source	COM/SMS/GPRS
Description	<p>C01</p> <p>01 After command is set, tracker sends a position message.</p> <p>02 When alarm detected, tracker sends alarm SMS with <u>C01</u> format automatically, to all SOS number(s).</p> <p>03 When command is sent via GPRS, tracker replies normal position data.</p>
Reply	<p>When command is sent via GPRS, the replied data is normal position package.</p> <p>When command is sent via SMS/COM</p> <p>&lt;string_head&gt;,yyyy-MM-dd hh:mm:ss, &lt;spd&gt;KM/h,&lt;gprs_st&gt;,&lt;gps_fix&gt;,EXPW:&lt;PST&gt;</p> <p>http://maps.google.com/maps?q=&lt;Latitude&gt;,&lt;Longitude&gt;&amp;t=m</p>

	<p>a string_head: SMS head string, for normal position data, <i>string_head</i> is empty, for alarm data, refer to <a href="#">Appendix-A</a> for default string.</p> <p>b yyyy-MM-dd hh:mm:ss: current date &amp; time, which is effected by <a href="#">B14</a> command setting.</p> <p>c spd: current speed, unit km/h.</p> <p>d gprs_st: GPRS link status, value: "Connected" or "Disconnected".</p> <p>e gps_fix: GPS signal status, 'A'-fixed, 'V'-not fixed.</p> <p>f PST: Status of ext-power input, "ON" -- ext-power is connected, "OFF" -- ext-power is disconnected.</p> <p>g Latitude, Longitude: Latitude and longitude of last position point.</p>
Example	C01
Retrieve	UNSUPPORT

### C02 – Retrieve Firmware/Hardware Version, SN, IMEI

Source	GPRS/COM/SMS
Description	C02
Reply	<p>Uploading data format:</p> <p>C02,&lt;IMEI&gt;,&lt;SN&gt;,&lt;fw_ver&gt;,&lt;hw_ver&gt;</p> <p>01 IMEI: IMEI of tracker.</p> <p>02 SN: Serial number of tracker.</p> <p>03 fw_ver: Firmware version.</p> <p>04 hw_ver: Hardware version.</p>
Example	C02
Retrieve	UNSUPPORT

### C03 – Retrieve Supply Power Status

Source	GPRS/COM/SMS
Description	C03
Reply	<p>Uploading data format:</p> <p>C03,&lt;extp_v&gt;,&lt;bat_v&gt;,&lt;bat_percentage&gt;</p> <p>01 extp_v: Voltage of ext-power, unit V.</p> <p>02 bat_v: Voltage of internal battery.</p> <p>03 bat_percentage: Percentage of internal battery capacity.</p>
Example	C03
Retrieve	UNSUPPORT

### C04 – Retrieve Parameter Setting

Source	GPRS/COM/SMS
--------	--------------

Description	C04,<cmd-code>,<query_para> 01 cmd-code: Command code to be retrieved. 02 query_para: Query parameter; refer to chapters above for detail.
Reply	C04,<cmd>,<cmd-para> 01 cmd-code: The same as sending command. 02 cmd-para: Retrieved parameter string, the same format as setting command described in the above chapters.
Example	Refer to chapters above.
Retrieve	UNSUPPORT

## C05 – Retrieve Installation Status of Ultrasonic Fuel Sensor

Source	GPRS/COM/SMS
Description	C05 01 The command is used to retrieve the status of ultrasonic fuel sensor after installation
Reply	C05,<rt_level>,<install-status> 01 rt_level: Current fuel level read from fuel sensor, unit mm 02 install-status: Installation status, string, OK - Installation OK ERROR - No probe installed, or tracker cannot read sensor message Probe Disconnect - The connection of probe lost Probe Unstable - Probe unstable Low Power - Low power supply for fuel sensor Detection Signal Blind - Signal blind, fuel level is too low to be detected
Example	Refer to chapters above.
Retrieve	UNSUPPORT

## C06 – Retrieve Basic Information of Tracker

Source	GPRS/COM/SMS
Description	C06 01 Retrieve basic information of tracker in batch 02 The command is commonly used for GPRS linkage lost debug
Reply	C06,<GID>,<ip>:<port>,<TCP/UDP>;APN:<apn>,<apn_user>,<apn_pwd>;EXT:<ext_p>,BAT:<bat_v>;B03:<base_int>,<accoff_int>,<ns_int>;<ACC ON/OFF>,<Moving/STOP> 01 GID: Tracker ID for GPRS data, default IMEI 02 ip, port: Server setting in tracker 03 TCP/UDP: Transport protocol setting, string, value "TCP" / "UDP" 04 apn, apn_user, apn_pwd: APN setting in tracker 05 ext_p: Voltage of external power supply, unit V 06 bat_v: Voltage of internal battery, unit V 07 base_int, accoff_int, ns_int: GPRS uploading interval for normal situation, for ACC OFF,



	for parking status, which is the same as <u>B03</u> setting 08 ACC ON/OFF: Current ACC status, string, value "ACC ON" / "ACC OFF" 09 Moving/STOP: Current motion status, string, value "Moving" / "STOP"
Example	Command: C06 Reply: C06,861694033095389,47.88.35.165:10502,TCP;APN:CMNET,,;EXT:12.00V,BAT:4.17V;B03:100,0,0,ACC OFF,Stop
Retrieve	UNSUPPORT

## C08 – Retrieving AD voltage

Source	GPRS/COM/SMS
Description	C08,<rt-data> 01 The command is used to retrieve voltage on AD port. 02 rt-data: 1(default)—Tracker reply real-time voltage; 0—Tracker does smooth filtration, and then replies 03 Different for <u>rt-data</u> <u>rt-data==1</u> : Voltage is related to sensor itself, when sensor signal is stable, sending C08 command for retrieving, and the result would be true <u>rt-data==0</u> : Voltage is related not only to sensor itself, but to working environment (e.g. fuel sensor voltage on running vehicle). Tracker needs at least 1min to sample enough data, does smooth filtration. There could have some error to true voltage. 04 The result of <u>C08</u> reply is actual voltage on AD port, which isn't effected by <u>B34</u> command setting
Reply	C08,<AD1>:<ad1-voltage>,<AD2>:<ad2-voltage>....<And>:<and-voltage> 01 adx-voltage: Voltage on ADx, unit V
Example	Command: C08 Reply: C08,AD1:4.32,AD2:4.36
Retrieve	UNSUPPORT

## D05 – Photographing

Source	GPRS/SMS/COM
Description	D05, <resolution> 01 resolution: Photo resolution, definition as below, default 3 1: 160*128 2: 320*240 3: 640*480
Reply	D05, <date-time>,<lat>,<lon>,<cam_id>,<snap_src>,<pic_fmt>,<pic_size>,<pic_id> 01 After photograph finished (including command control, timing, alarm triggering), tracker will upload <u>D05</u> package to server, to indicate the information of photo. 02 GMT0 date & time, in format: YYMMDDHHmmss; Data & Time when photographing



	<p>a YY: year, value (year – 2000), 2 characters</p> <p>b MM: month, value range 1--12, 2 characters</p> <p>c DD: day, value range 1--31, 2 characters</p> <p>d HH: hour, value range 0--23, 2 characters</p> <p>e mm: minute, value range 0--59, 2 characters</p> <p>f ss: second, value range 0--59, 2 characters</p> <p>03 lat/lon: Latitude/Longitude when photographing</p> <p>04 cam_id: Fixed value as "1"</p> <p>05 snap_src: Event source of taking photograph</p> <ul style="list-style-type: none"> <li>0: Command</li> <li>1: Timing photographing</li> <li>2 Alarm Trigger, this field indicates alarm code (refer to <a href="#">Appendix A</a>). Command <a href="#">B23</a> can be used to set enable/disable alarm photographing</li> </ul> <p>06 pic_fmt: Photograph format, as below,</p> <ul style="list-style-type: none"> <li>1: JPG/JPEG</li> <li>2: BMP</li> <li>3: PNG</li> </ul> <p>07 pic_size: photo size, decimal string format, unit byte</p> <p>08 pic_id: Photo ID, the unique identifier to photo, hexadecimal string format, server can use <u>pic_id</u> to fetch or re-fetch photo's data</p> <p>09 After <u>D05</u> package uploaded, tracker waits for <u>D06</u> package from server, and re-sends <u>D05</u> package every 30s if <u>D06</u> not received.</p> <p>10 The procedure of photographing, as below:</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 10%;">Step</th> <th style="width: 50%;">Tracker</th> <th style="width: 40%;">Server</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Taking photo</td> <td>Do nothing</td> </tr> <tr> <td>2</td> <td>Uploading <u>D05</u>, which including photo's information</td> <td>Parsing <u>D05</u>; Sends <u>D06</u> to fetch data, using <u>pic_size</u> and <u>pic_id</u></td> </tr> <tr> <td>3</td> <td>Sending photo data via <u>D06</u></td> <td>Parsing <u>D06</u>, saving photo data; Re-sends <u>D06</u>, till all <u>pic_size</u> bytes retrieved.</td> </tr> </tbody> </table>	Step	Tracker	Server	1	Taking photo	Do nothing	2	Uploading <u>D05</u> , which including photo's information	Parsing <u>D05</u> ; Sends <u>D06</u> to fetch data, using <u>pic_size</u> and <u>pic_id</u>	3	Sending photo data via <u>D06</u>	Parsing <u>D06</u> , saving photo data; Re-sends <u>D06</u> , till all <u>pic_size</u> bytes retrieved.
Step	Tracker	Server											
1	Taking photo	Do nothing											
2	Uploading <u>D05</u> , which including photo's information	Parsing <u>D05</u> ; Sends <u>D06</u> to fetch data, using <u>pic_size</u> and <u>pic_id</u>											
3	Sending photo data via <u>D06</u>	Parsing <u>D06</u> , saving photo data; Re-sends <u>D06</u> , till all <u>pic_size</u> bytes retrieved.											
Example	<p>D05,2</p> <p>01 Take photo using 1# camera, resolution 2 (i.e. 320*240)</p>												
Retrieve	UNSUPPORT												

D06 – Retrieve Photo Data	
Source	GPRS
Description	<p>D06,&lt;pic_id&gt;,&lt;offset&gt;,&lt;size&gt;</p> <p>01 After photograph finished (including command control, timing, alarm triggering), tracker will upload <u>D05</u> package to server, to indicate the information of photo; Server sends <u>D06</u> command to retrieve photo data.</p> <p>02 pic_id: Photo ID, the unique identifier to photo, hexadecimal string format. This field is the same as <u>pic_id</u> from tracker's <u>D05</u> package</p>





	<p>03 offset: Photo data offset, decimal string format, range [0,<i>pic_size</i>)</p> <p>04 size: Data size to be retrieved, decimal string format, unit byte, range(0,1024]</p>
Reply	<p>D06, &lt;pic_id&gt;,&lt;offset&gt;,&lt;size&gt;,&lt;pic_data&gt;</p> <p>01 When D06 package received, tracker searches photo using <i>pic_id</i>, and sends data to server</p> <p>02 pic_id: Photo ID, the only identifier to photo, hexadecimal string format. It is the same as <i>pic_id</i> from server's <i>D06</i> package.</p> <p>03 offset: Photo data offset, decimal string format. It is the same as <i>offset</i> from server's D06 package.</p> <p>04 size: The size of <i>pic_data</i>, decimal string format, unit byte</p> <p>05 pic_data: Photo data</p>
Example	
Retrieve	UNSUPPORT

## D07 – Timing Photographing

Source	GPRS/SMS/COM
Description	<p>D07, &lt;interval&gt;,&lt;resolution&gt;</p> <p>01 interval: Timing interval, unit second; If <i>interval</i>==0, disable timing photographing function</p> <p>02 resolution: Photo resolution, refer to <i>D05</i> command for detail.</p> <p>03 When timing photographing enabled, tracker takes photo when time counter arrived, and uploads <i>D05</i> package, which contains photo's information, to server; Server sends <i>D06</i> command to retrieve data after receives <i>D05</i> package.</p>
Reply	D07,OK
Example	<p>D07,3600,2</p> <p>01 Enable timing photographing, tracker takes photo with resolution 320*240, every 3600s.</p> <p>D07,0</p> <p>01 Disable timing photographing function</p>
Retrieve	C04,D07

## F11 – Display Setting

Source	GPRS/SMS/COM
Description	<p>F11,&lt;update-interval&gt;,&lt;src&gt;,&lt;para&gt;</p> <p>01 The command is used to set display data source, and parameters about display data</p> <p>02 update-interval: Refresh time of the display, unit second, range [0,36000]</p> <p>03 src: Data source for display</p> <p>04 para: Parameters for data source</p> <p>05 Below table shows details about <i>src</i> and <i>para</i></p>



	src	Description	para
	0	For testing	Digital data shows on display directly
	1	AD1	<min>,<max>: Maximum/Minimum data for display, unit self-define, e.g. liters/cm
	2	AD2	<min>,<max>: Maximum/Minimum data for display, unit self-define, e.g. liters/cm
	else	Reserved for future use	
Reply	F11,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.		
Example	F11,0,0,3456 01 Show “3456” on display tool, it is used for testing  F11,10,1,0,500 01 Show AD1 information on display tool, tracker fetches voltage from AD1, maps to range [0,500], and then shows the result		
Retrieve	C04,F11		

## S09 – Setting GPRS Heartbeat Interval

Source	GPRS/COM/SMS
Description	S09,<acc-on-interval>,<acc-off-interval> 01 Heartbeat package is independent from normal GPRS position one 02 acc-on-interval, acc-off-interval: Heartbeat interval for ACC ON and ACC OFF, unit: s; default <u>acc-on-interval==0</u> , <u>acc-off-interval==0</u> , which means heartbeat disabled 03 When <u>acc-on-interval</u> or <u>acc-off-interval</u> is set to 0, heartbeat disabled for corresponding ACC status 03 Heartbeat data will not be saved to blind buffer; When new heartbeat package generated, old and unsent one will be discarded
Reply	S09,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	S09,180,300 01 Setting heartbeat interval to 180s for ACC ON, and 300s for ACC OFF  S09,0,300 01 Setting heartbeat interval to 300s for ACC OFF, and disable heartbeat for ACC ON  S09 01 Disable heartbeat for both ACC ON and ACC OFF

Retrieve	C04,S09
----------	---------

## S13 – Switching A02 Package Format

Source	GPRS/COM/SMS
Description	<p>S13,&lt;type&gt;,&lt;tmrout&gt;,&lt;re-send-cnt&gt;</p> <p>01 Tracker supports two GPRS package format, <u>A01</u> and <u>A02</u>; <u>S13</u> command is used to switch the format</p> <p>02 type: Package format select, 0—<u>A01</u> format, 1—<u>A02</u> format  <u>A01</u> format: normal package format, no acknowledge needed from server  <u>A02</u> format: uolpad-acknowledge format, tracker wait for acknowledge for uploading confirmation; Re-send package if no acknowledge received</p> <p>03 tmrout: re-send timeout, unit s, default 60s; After <u>A02</u> package uploaded, tracker re-sends the same package after <u>tmrout</u> seconds if no acknowledge received</p> <p>04 re-send-cnt: Maximum package re-sending times; Tracker aborts package when exceeds <u>re-send-cnt</u> times; default 0, which means package will be uploaded always</p> <p>05 <u>tmrout</u>, <u>re-send-cnt</u> valid under <u>A02</u> mode</p>
Reply	<p>S13,&lt;err_code&gt;</p> <p>01 err_code: procession error code.  OK – Succeed.  UNSUPPORT – Command not supported.  FAILED – Procession failed.</p>
Example	<p>S13,1</p> <p>01 Enable A02 format, tmrout and re-send-cnt use default setting (tmrout==60, re-send-cnt==0)</p> <p>02 Tracker will upload package every 60s always if no acknowledge received</p>
Retrieve	C04,S13

## Appendix A - Alarm Code and Alarm Parameter

The following table describes the relationship of *alm-code* and *alm-para* in GPS Position/Alarm data:

alm-code	alm-para	Description	SMS Head String
1	NULL	Distance tracking	Distance
2	NULL	Input1 active	SOS
3	NULL	Input1 inactive	IN1 Inactive
4	NULL	Input2 active	IN2
5	NULL	Input2 inactive	IN2 Inactive
6	NULL	Input3 active	IN3
7	NULL	Input3 inactive	IN3 Inactive
8	NULL	Input4 active	IN4
9	NULL	Input4 inactive	IN4 Inactive
14	Ext-power voltage, unit V	Ext-power low	Low Ext-Power
15	NULL	Ext-power lost	Ext-Power Cut
16	NULL	Ext-power re-connect	Ext-Power On
17	Battery voltage, unit V	Internal battery low	Low Battery
18	NULL	Speeding alarm	Speeding
20	NULL	GPS antenna cut	GPS Antenna Cut
21	NULL	Vibration Alarm	Vibration
23	NULL	Harsh accelerate	Harsh Accelerate
24	NULL	Harsh braking	Harsh Braking
27	NULL	Fatigue driving	Fatigue Driving
28	NULL	Fatigue relieve	Fatigue Relieve
29	NULL	Parking overtime	Parking Overtime
30	NULL	Wireless communication jamming	GSM Jamming
32	NULL	GPS jamming	GPS Jamming
33	Hexadecimal character: bit[7:4]: geo-fence type: 0 - Circle fence 1 - Polygon fence bit[3:0]: index of fence	Exit geo-fence	Exit Fence
34	The same as "Exit Fence"	Enter geo-fence	Enter Fence
35	NULL	Idling Alarm	Idling Alarm
37	NULL	Login	Login
38	NULL	Log Out	Log Out
39	NULL	Illegal Login	Illegal Login
40	sn	High Temperature	High Temperature

	sn: Digital temperature sensor's number, refer to B37		
41	sn sn: Digital temperature sensor's number, refer to B37	Low Temperature	Low Temperature
43	com_port com_port: COM port number	COM Port Communication Error	COM Port Error
44	NULL	Fuel Theft Alarm	Fuel Theft
45	NULL	Fuel Filling Alarm	Fuel Filling
46	NULL	Low Fuel Level Alarm	Fuel Level Low
47	NULL	High Fuel Level Alarm	Fuel Level High