


FIFOTRACK COMMAND LIST

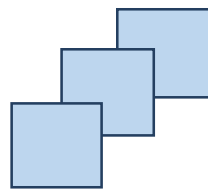


Model: S30

Version: V1.4

www.fifotrack.com

Copyright and Disclaimer

- © All copyrights belong to Shenzhen fifotrack Solution Co., Ltd. You are not allowed to revise, copy or spread this file in any form without consent of fifotrack.
- ©  is trademark of fifotrack, protected by law.
- © Please read this user guide carefully before installation to avoid any possible personal injury or property loss.

Document History

Version	Revision Date	Author	Detail
V1.4	Nov 10, 2020	Vito Hu	Delete <u>B22</u> , <u>B29</u> , <u>B96</u> command Modify <u>B03</u> , <u>B04</u> command Delete " <u>Vibration</u> ", " <u>Parking Overtime</u> ", " <u>Enter Sleep</u> ", " <u>Wakeup</u> ", " <u>GSM Jamming</u> ", " <u>GPS Jamming</u> " alarm code
V1.3	Dec 12, 2018	Vito Hu	Modify <u>B23</u> command Add <u>B24</u> , <u>B25</u> , <u>B34</u> , <u>B45</u> , <u>B46</u> , <u>B99</u> command Add alm-code 21, 30, 32
V1.2	Oct 15, 2018	Vito Hu	Add <u>C08</u> , <u>S09</u> command; Add <u>buz</u> field in <u>B08</u> command
V1.1	Jan 3, 2018	Vito Hu	Revision Version

Contents

Document History	3
1 GPRS Command Format	6
2 SMS Command Format.....	7
3 Serial port (COM) Command Format	8
4 Command Writing Specification	9
5 Command List	10
B00 – Setting GPRS Parameters.....	10
B01 – Setting GPRS APN Parameters	10
B02 – Setting GPRS Link Protocol	11
B03 – Setting Tracking Time Interval	11
B04 – Setting Roaming Tracking Time Interval	错误！未定义书签。
B05 – Setting Distance Tracking Interval	12
B07 – Setting the Direction Change Upload	12
B08 – Setting Speeding Alarm	13
B10 – Setting SMS Password	13
B11 – Setting SOS Number	13
B12 – Output Control	14
B13 – Pulse Output Control	14
B14 – Setting SMS Time Zone	15
B15 – Setting Sleep Mode	15
B16 – Setting Initial Mileage.....	16
B17 – Clear Blind Data	16
B18 – Setting in-port Working Mode.....	16
B19 – Setting Circle geo-fence	17
B21 – Setting Fatigue Driving	17
B22 – Setting Maximum Parking Time	错误！未定义书签。
B23 – Setting Alarm Action.....	18
B24 – Setting Complicated Alarm Action.....	19
B25 – Setting SMS Timing Tracking	19
B26 – Setting Alarm SMS Head String	20
B27 – Setting Parameters of Harsh Acceleration Alarm	20

B28 – Setting Parameters of Harsh Braking Alarm	21
B29 – Setting Sensitivity of Motion Sensor	错误! 未定义书签。
B31 – Setting SOS Number Attribute.....	21
B33 – Setting Maximum Idle Time	22
B34 – Setting Voltage Range for AD Port.....	22
B37 – Setting Digital Temperature Number.....	23
B38 – Setting High/Low Temperature Alarm.....	24
B39 – Delete Digital Temperature Sensor.....	24
B40 – Retrieve Temperature Sensor Data.....	25
B42 – Authorizing iButton Tag(s).....	25
B43 – Delete Authorized iButton Tag(s).....	26
B44 – Retrieve iButton Tag(s) Authorization	26
B45 – RFID/iButton/Fingerprint Optional Function.....	27
B46 – Setting Passenger Mode for RFID/iButton/Fingerprint	27
B80 – Setting Fuel Theft/Filling Alarm.....	28
B81 – Setting Fuel Level Alarm	29
B82 – Enable/Disable Fuel Consumption Statistics	29
B90 – Reset Tracker or Module.....	30
B91 – Setting Parameters to Default	31
B94 – Turn on/off LED Display	31
B96 – Enable/Disable Vibration Alarm.....	错误! 未定义书签。
B98 – Setting Lower Power Parameters	31
B99 – OTA using FTP Server	32
C01 – Retrieve Position Information.....	33
C02 – Retrieve Firmware/Hardware Version, SN, IMEI	34
C03 – Retrieve Supply Power Status.....	34
C04 – Retrieve Parameter Setting	34
C06 – Retrieve Basic Information of Tracker.....	35
C08 – Retrieve Voltage on AD Input	35
S09 – Setting GPRS Heartbeat Interval	36
Appendix A – Alarm code and alarm parameter.....	38

1 GPRS Command Format

GPRS uplink (i.e.: Data is sent from terminal to platform) command format:

\$\$<pack-len>,<ID>,<work-no>,<cmd-code>,<cmd-para>*<checksum>\r\n

GPRS downlink (i.e.: Data is sent form platform to terminal) command format:

##<pack-len>,<ID>,<work-no>,<cmd-code>,<cmd-para>*<checksum>\r\n

Remarks:

- ⦿ Comma (,) is used to separate data field, and it is necessary. There is no space before or after comma.
- ⦿ pack-len: Package Length, decimal string format, the field of *pack-len* is {,<ID>,<work-no>,<cmd-code>,<cmd-para>}, be careful, comma(,) in front of *ID* included.
- ⦿ ID: Terminal ID, default IMEI.
- ⦿ work-no: working number, hexadecimal string format, cyclic accumulation from 1 to 0xFFFF.
- ⦿ cmd-code: Command code, or specification of data type.
- ⦿ cmd-para: parameter or description of *cmd-code*, which is described in the following chapter.
- ⦿ checksum: checksum of package, 2 bytes hexadecimal string format, XOR of {<pack-len>,<ID>,<work-no>,<cmd-code>,<cmd-para>}.
- ⦿ \r\n: End of package, i.e. <CR><LF>.
- ⦿ Without specification, multi-byte binary data in *cmd-para* uses big endian format, i.e. Most Significant Byte first.

2 SMS Command Format

Sending SMS (from mobile to tracker) command format:

<password>,<cmd-code>,<cmd-para>

Reply SMS (from tracker to mobile) data format:

<cmd-code>,<proc-result>

01 password: SMS password, 6 digits, default "000000".

02 cmd-code: command code, the same as cmd-code filed in GPRS command.

03 cmd-para: command parameter, the same as cmd-para filed in GPRS command.

04 proc-result: command process result

OK – Succeed.

05 SMS command with invalid password, or with incorrect format, no reply will be sent.

3 Serial port (COM) Command Format

Setting command format:

#<cmd-code>,<cmd-para><CR><LF>

Reply data format:

#<cmd-code>,<proc-result><CR><LF>

cmd-code, cmd-para: the same as corresponding filed of GPRS/SMS command.

proc-result: SMS command procession result

OK – Succeed.

UNSUPPORT – Command not supported.

FAILED –Procession failed.

4 Command Writing Specification

- ⦿ Comma (,) is used to separate multi-filed, there is no space before and after comma.
- ⦿ For command with multi parameters, filed(s) can be empty, the corresponding parameter is set to default.
- ⦿ The following chapters describe cmd-code and cmd-para.
- ⦿ The “Retrieve” row in the following chapters describes the corresponding query command.

5 Command List

B00 – Setting GPRS Parameters	
Source	GPRS/COM/SMS
Description	<p>B00,<svr_type>,<net_addr>,<net_port></p> <p>01 svr_type: server selection, 1--main server, 2--backup server; When the connection to main server cannot be reached, tracker will automatically connect to the backup server. This avoids data losses.</p> <p>02 net_addr: server IP or domain.</p> <p>03 net_port: server port.</p>
Reply	<p>B00,<err_code></p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B00,1, 47.88.35.165,10502</p> <p>01 Set main server: IP-47.88.35.165, port-10502.</p>
Retrieve	<p>C04,B00,<svr_type></p> <p>01 svr_type: server selection, the same as <u>svr_type</u> field in setting command.</p>

B01 – Setting GPRS APN Parameters	
Source	GPRS/COM/SMS
Description	<p>B01,<apn_name>,<apn_usr>,<apn_pwd></p> <p>01 apn_name: APN name.</p> <p>02 apn_usr: APN user name.</p> <p>03 apn_pwd: APN password.</p> <p>04 Leave <u>apn_usr</u>, <u>apn_pwd</u> field empty, if no APN username and APN password exist.</p> <p>05 Contact to local ISP for APN detail.</p>
Reply	<p>B01,<err_code></p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B01,cmnet</p> <p>01 Set APN name to “cmnet”, APN login username and password empty.</p>
Retrieve	C04,B01

B02 – Setting GPRS Link Protocol

Source	GPRS/COM/SMS
Description	B02,<link_type> 01 link_type: Link protocol, value TCP or UDP. 02 default TCP protocol.
Reply	B02,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B02,TCP 01 Set link protocol to TCP.
Retrieve	C04,B02

B03 – Setting Tracking Time Interval

Source	GPRS/COM/SMS
Description	B03,<basic_tmr>,<accoff_tmr> 01 basic_tme: normal time interval, unit s. 02 accoff_tmr: time interval when ACC OFF, unit s, default 0s.
Reply	B03,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B03,30 01 Set timing tracking interval to 30s, tracker uploads position data every 30s.
Retrieve	C04,B03

B04 – Setting Roaming Tracking Time Interval

Source	GPRS/COM/SMS
Description	B04, <roam_basic_tmr>,<roam_accoff_tmr> 01 roam_basic_tmr: roaming time interval, unit s, default 0s. 02 roam_accoff_tmr: time interval when ACC OFF under roaming, unit s, default 0s. 03 When both <u>B03</u> and <u>B04</u> (<i>roam basic tmr</i> != 0) are set, tracker uses below logic for uploading: <ul style="list-style-type: none"> ⊙ When roaming detected, tracker uploads GPRS using <u>B04</u> setting, according to ACC status ⊙ For non-roaming condition, tracker uploads GPRS using <u>B03</u> setting, according to ACC status

Reply	B04,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B04,3600 01 Set timing tracking interval to 3600s while roaming. B04,3600,7200 01 Setting timing tracking interval to 3600s when ACC ON, 7200s when ACC off, under roaming status
Retrieve	C04,B04

B05 – Setting Distance Tracking Interval

Source	GPRS/COM/SMS
Description	B05,<basic_dst> 01 basic_dst: Distance tracking interval, unit meter. 02 Distance Tracking is independent from timing tracking.
Reply	B05,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B05,100 01 Set distance tracking to 100m.
Retrieve	C04,B05

B07 – Setting the Direction Change Upload

Source	GPRS/COM/SMS
Description	B07,<course> 01 course: direction change angle, unit degree, range 1--359, default 0. 02 When <u>course</u> is set to 0, direction change upload is disabled. 03 When driving direction change exceeds the setting value, tracker will upload a position data for supplement.
Reply	B07,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B07,30

	01 Set direction change angle to 30°.
Retrieve	C04,B07

B08 – Setting Speeding Alarm

Source	GPRS/COM/SMS
Description	B08,<speeding>,<buz> 01 speeding: speed, unit km/h, range 0--300, default 0. 02 When <i>speeding</i> is set to 0, speeding alarm is disabled. 03 buz: 1—Enable buzzer when speeding; 0—Disable(default) 04 When <i>buz==1</i> , tracker controls buzzer via OUT2, till speed returns to normal
Reply	B08,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B08,90 01 Set speed limit to 90km/h; Disable buzzer
Retrieve	C04,B08

B10 – Setting SMS Password

Source	GPRS/COM/SMS
Description	B10,<sms_pwd> 01 sms_pwd: SMS password, 6 digits, default “000000”.
Reply	B10,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B10,472627 01 Set SMS password to “472627”. B10,47262A 01 Invalid command, because SMS password needs to be a 6 digits string.
Retrieve	C04,B10

B11 – Setting SOS Number

Source	GPRS/COM/SMS
Description	B11,<sos_num1>,<sos_num2>,<sos_num3>

	01 sos_num1, 2, 3: SOS numbers to be set; 3 numbers can be set at most. 02 Refer to B23 for the function of SOS number(s).
Reply	B11,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B11,15698210011,,15698210200 01 Set sos_num1 to 15698210011, sos_num2 to empty, sos_num3 to 15698210200.
Retrieve	C04,B11

B12 – Output Control

Source	GPRS/COM/SMS
Description	B12,<index>,<action>,<safe_speed> 01 index: out port selection, value 1, 2, 3... etc.. 02 action: Output control, 0--output low level, 1--output high level. 03 safe_speed: speed limit, unit km/h, range 1—300; when this parameter is set to 0, or this field is empty, output control takes effect immediately; Other value, set the speed limit for output control. When the driving speed is lower than the speed limit, the output control takes effect.
Reply	B12,<err_code> 01 err_code: error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED –Processing failed.
Example	B12,1,1,20 01 Set OUT1 to output high level when speed less than 20km/h.
Retrieve	UNSUPPORT

B13 – Pulse Output Control

Source	GPRS/COM/SMS
Description	B13,<index>,<on_time>,<off_time>,<pls_cnt> 01 index: out port specification, value 1, 2, 3... etc.. 02 on_time: Duration of high level, unit ms. 03 off_time: Duration of low level, unit ms. 04 pls_cnt: Pulse number.
Reply	B13,<err_code> 01 err_code: error code. OK – Succeed. UNSUPPORT – Command not supported.

	FAILED –Processing failed.
Example	B13,1,1000,1000,10 01 Set OUT1 to output 10 pulse, whose high level duration 1000ms, low level duration 1000ms.
Retrieve	UNSUPPORT

B14 – Setting SMS Time Zone

Source	GPRS/COM/SMS
Description	B14,<tzone> 01 tzone: time zone, range [-12, 12]. 02 Default value of <u>tzone</u> is 0. 03 When SMS time zone is set, all tracking/alarm SMS use <u>tzone</u> for date & time. 04 GPRS data uploading uses UTC-0 time zone.
Reply	B14,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B14,-8
Retrieve	C04,B14

B15 – Setting Sleep Mode

Source	GPRS/COM/SMS
Description	B15,<slp_mode>,<slp_wait_tmr> 01 slp_mode: sleep mode, 0—sleep is disabled, 1--normal sleep, 2--deep sleep. 02 slp_wait_tmr: waiting time to sleep mode, unit s, default 300s. 03 Normal sleep: turn off all the power except GSM module, terminal will be waked up by IO trigger, incoming phone-call or SMS. 04 Deep sleep: turn off all the power supply, only wake up by IO trigger.
Reply	B15,<err_code> 01 err_code: error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED –Processing failed.
Example	B15,1 01 Enable normal sleep mode, and waiting time to sleep mode is the default 300s.
Retrieve	C04,B15

B16 – Setting Initial Mileage	
Source	GPRS/COM/SMS
Description	B16,<init_mile> 01 init_mile: initial mileage, unit meter, default 0m.
Reply	B16,<err_code> 01 err_code: error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED –Processing failed.
Example	B16 01 Set both initial mileage to 0m
Retrieve	C04,B16 01 The retrieved value is current mileage, not the setting ones.

B17 – Clear Blind Data	
Source	GPRS/COM/SMS
Description	B17,<data_type> 01 data_type: blind data type. 1 – GPRS Blind. 2 – SMS blind. 3 – Both GPRS and SMS blind.
Reply	B17,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B17,3 01 Clear both GPRS and SMS blind data.
Retrieve	UNSUPPORT

B18 – Setting Smart IO Working Mode	
Source	GPRS/COM/SMS
Description	B18,<input>,<valid_mode> 01 input: in-port selection, 1–IN1, 2–IN2, etc.. For S30, only IN1 is smart input, which can be set using the command 02 valid_mode: valid trigger mode, 0--low level valid, 1--high level valid.
Reply	B18,<err_code> 01 err_code: error code. OK – Succeed.

	UNSUPPORT – Command not supported. FAILED –Processing failed.
Example	B18,1,1 01 Set IN1 to high level valid mode.
Retrieve	C04,B18,<input> 01 input: in-port selection, the same as <i>input</i> field in setting command.

B19 – Setting Circle geo-fence

Source	GPRS/COM/SMS
Description	<p>B19,<index>,<flag>,<radius>,<lat>,<lon></p> <p>01 index: fence index, value 1~8, i.e.: 8 geo-fence can be set at most.</p> <p>02 flag: alarm flag</p> <p style="padding-left: 20px;">flag=1: Trigger alarm when exit fence.</p> <p style="padding-left: 20px;">flag=2: Trigger alarm when enter fence.</p> <p style="padding-left: 20px;">flag=3: Trigger alarm both enter and exit fence.</p> <p>03 radius: radius of circle geo-fence, unit meter.</p> <p>04 lat: latitude of center point, decimal string format.</p> <p>05 lon: longitude of center point, decimal string format.</p> <p>06 When <i>lat</i> and <i>lon</i> are empty, current latitude and longitude is used, while GPS valid signal is needed.</p> <p>07 When <i>flag</i>, <i>radius</i>, <i>lat</i>, <i>lon</i> are empty, delete geo-fence specified by <i>index</i>; When <i>index</i>=0 or empty, delete all.</p>
Reply	<p>B19,<err_code></p> <p>01 err_code: procession error code.</p> <p style="padding-left: 20px;">OK – Succeed.</p> <p style="padding-left: 20px;">UNSUPPORT – Command not supported.</p> <p style="padding-left: 20px;">FAILED – Procession failed.</p>
Example	<p>B19,1,3,200</p> <p>01 Set the first circle geo-fence, centre point: current location, radius: 200m, output alarm both enter and exit fence.</p>
Retrieve	<p>C04,B19,<index></p> <p>01 index: fence index, value 1~8, the same as <i>index</i> field in setting command.</p>

B21 – Setting Fatigue Driving

Source	GPRS/COM/SMS
Description	<p>B21,<drowsy_time>,<rest_time></p> <p>01 drowsy_time: Fatigue driving time, unit s, default 14400s.</p> <p>02 rest_time: Minimum rest time after fatigue driving, unit s, default 1200s.</p> <p>03 When <i>drowsy time</i> is set to 0, fatigue driving alarm is disabled.</p> <p>04 The field <i>rest time</i> can be empty, while the default value is used.</p>

	05 When <i>drowsy time</i> and <i>rest time</i> are empty, both values are set to default.
Reply	B21,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B21 01 Set fatigue driving time to the default value 14400s, and minimum rest time to the default value 1200s.
Retrieve	C04,B21

B23 – Setting Alarm Action

Source	GPRS/COM/SMS
Description	B23,<alm-code>,<GPRS><SMS><two-way-call><monitor-call><photo><AN-idx> 01 alm-code: Alarm type, refer to Appendix –A. 02 GPRS: Disable/enable GPRS uploading. 03 SMS: Disable/enable SMS to SOS number. 04 two-way-call: Disable/enable SOS number dialing under two-way conversation, set to 0 for actual useage. 05 monitor-call: Disable/enable SOS number dialing under monitor mode. 06 photo: Disable/enable photographing, set to 0 for actual useage. 07 AN-idx: Complicated action, value 1~6, which corresponds to <i>AN-idx</i> field in B24 command; AN is composed of a serial command sets, performing user define operations; Refer to B24 command for detail. 08 When both <i>two-way-call</i> and <i>monitor-call</i> are set, <i>monitor-call</i> is valid, while <i>two-way-call</i> ignored. 09 <i>two-way-call</i> or <i>monitor-call</i> is valid when SOS number set, refer to B11 command for SOS number(s) setting.
Reply	B23,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B23,2,110102 01 Set action when SOS triggered: a Sending GPRS alarm data to platform. b Sending alarm SMS with C01 format to SOS number. c Dial SOS numbers under monitor mode. d Perform operations which is defined by B24
Retrieve	C04,B23,<alm-code> 01 alm-code: Alarm type, refer to Appendix–A. The same as <i>alm-code</i> field in setting command.

B24 – Setting Complicated Alarm Action

Source	GPRS/COM/SMS
Description	<p>B24,<AN-idx>,'#oper-1',<delay_t>,'#oper-2',....</p> <p>01 The command defines complicated alarm action, “AN” for short; AN is used associated with B23 setting. When both <u>AN-idx</u> field in B23 command, and AN detail in B24 are set, operation can be performed then.</p> <p>02 AN-idx: AN index, value 1~6, corresponds to 1~6 operation sets; It can be selected by <u>AN-idx</u> field in B23 command.</p> <p>03 #oper-[1,2...]: Operation instruction, composed of a serial command(s). Maximum length of 64 bytes.</p> <p>04 delay_t: Delay time between adjoining operation, unit second. It means, tracker performs operations defined by <u>opera-1</u>, delay <u>delay_t</u> seconds, then perform <u>opera-2</u></p> <p>05 The writing rule of B24:</p> <ul style="list-style-type: none"> a Single quotes in front of and behind <u>oper-x</u> are needed, which is used to define operation start b <u>oper-x</u> is composed of commands sets, it is written in “Serial port (COM) Command Format”. For example, '#B12,1,1' c <u>delay_t</u> is written in digital directly, there is no single quote in front or behind <p>06 The operation flow of AN action</p> <ul style="list-style-type: none"> a Tracker detects alarm occurring. b Tracker checks whether <u>AN-idx</u> is selected in B23, and whether AN detail is set in B24. c When both B23 and B24 are set, tracker performs operation defined by B24.
Reply	<p>B24,<err_code></p> <p>01 err_code: procession error code.</p> <ul style="list-style-type: none"> OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	<p>B23,2,100003</p> <p>B24,3,'#B12,1,1',3,'#B12,1,0'</p> <p>01 Tracker will upload GPRS package, and perform AN3 when SOS detected.</p> <p>02 When SOS detected, tracker uploads GPRS alarm package, set OUTPUT1 high level, delay 3s, and then set OUTPUT1 low level.</p>
Retrieve	<p>C04,B24,<AN-idx ></p> <p>01 AN-idx: AN index, the same as <u>AN-idx</u> field in setting command</p>

B25 – Setting SMS Timing Tracking

Source	GPRS/COM/SMS
Description	<p>B25,<sms_interval>,<sos_list></p> <p>01 sms_interval: SMS Tracking interval, unit: s, default: 0s; when <u>sms interval</u>=0,</p>

	<p>disable SMS timing tracking</p> <p>02 The format of timing SMS is the same as <u>C01</u> reply</p> <p>03 <i>sos_list</i>: SOS number list, value 1, 2, 3 or the combination of them. Tracking SMS will be sent to the SOS number(s) defined by <i>sos_list</i>; When <i>sos_list</i> is empty, tracking SMS will be sent to #1 number by default;</p> <p>04 After setting SMS timing tracking, it is suggested to set SOS number(s) using <u>B11</u> command, to set time-zone using <u>B14</u> command.</p>
Reply	<p>B25,<err_code></p> <p>01 <i>err_code</i>: error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED –Processing failed.</p>
Example	<p>B25,120,23</p> <p>01 Enable SMS timing tracking, and set interval to 120s, tracking SMS will be sent to #2 and #3 SOS numbers</p>
Retrieve	C04,B25

B26 – Setting Alarm SMS Head String

Source	GPRS/COM/SMS
Description	<p>B26,<alm-code>,<sms_string></p> <p>01 <i>alm-code</i>: Alarm type, refer to Appendix –A.</p> <p>02 <i>sms_string</i>: SMS head string, 16 bytes length at most.</p> <p>03 Refer to Appendix-A for default string.</p>
Reply	<p>B26,<err_code></p> <p>01 <i>err_code</i>: error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED –Processing failed.</p>
Example	<p>B26,2,HELP</p> <p>01 Set SMS head string of SOS to “HELP”.</p>
Retrieve	<p>C04,B26,<alm-code></p> <p>01 <i>alm-code</i>: Alarm type, refer to Appendix –A. The same as <i>alm-code</i> field in setting command.</p>

B27 – Setting Parameters of Harsh Acceleration Alarm

Source	GPRS/COM/SMS
Description	<p>B27,<speed_var>,<time_lmt></p> <p>01 <i>speed_var</i>: maximum acceleration speed, unit km/h, default 0.</p> <p>02 <i>time_lmt</i>: hard acceleration detection time, unit s, default 0.</p> <p>03 Refer to Appendix –A for <i>alm-code</i> of harsh accelerate</p>

Reply	B27,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B27,40,2 01 Set hard acceleration parameters: 40km/h speed variation within 2s.
Retrieve	C04,B27

B28 – Setting Parameters of Harsh Braking Alarm

Source	GPRS/COM/SMS
Description	B28,<speed_var>,<time_lmt> 01 speed_var: maximum decrease speed, unit km/h, default 0. 02 time_lmt: hard braking detection time, unit s, default 0. 03 When driving speed decrease beyond <i>speed var</i> , tracker triggers hard braking alarm. 04 Refer to Appendix –A for <i>alm-code</i> of harsh brake
Reply	B28,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	Refer to example in B27
Retrieve	C04,B28

B31 – Setting SOS Number Attribute

Source	GPRS/COM/SMS
Description	B31,<sos-num>,<two-way-call>,<monitor>,<pos-sms> 01 Set SOS number attribute, refer to B11 command for SOS number setting. 02 sos-num: SOS index, value 1, 2, 3, which corresponds to SOS number set by B11 command. 03 two-way-call: attribute of two-way conversation. 04 monitor: attribute of monitor-mode conversation. 05 pos-sms: attribute of position SMS. 06 Description of attribute: two-way-call: tracker picks up incoming phone-call in two-way conversation mode. monitor: tracker picks up incoming phone-call in monitor mode. pos-sms: Tracker sends position SMS after incoming phone-call ends. Refer to C01 command for SMS format. 07 When both <i>two-way-call</i> and <i>monitor</i> are set, <i>monitor</i> is valid, i.e.: tracker picks up

	<p>phone-call in monitor mode.</p> <p>08 When the command string has only <u>sos-num</u> field, default attribute is set to corresponding SOS number.</p> <p>09 Default attribute of SOS number: <u>two-way-call</u> and <u>pos-sms</u>.</p>
Reply	<p>B31,<err_code></p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B31,1,1,1,1</p> <p>01 Set attribute of the first SOS number: tracker automatically picks up incoming phone-call under monitor mode, reply a position SMS.</p>
Retrieve	<p>C04,B31,<sos-num></p> <p>01 sos-num: SOS index, value 1, 2, 3. The same as <u>sos-num</u> field in setting command.</p>

B33 – Setting Maximum Idle Time

Source	GPRS/COM/SMS
Description	<p>B33,<idle_time></p> <p>01 idle_time: maximum idle time, unit: s, default 0s. This parameter should be greater than 300s.</p> <p>02 idle definition: ACC ON, but no speed, which means engine running under idle mode.</p> <p>03 When idle mode detected, tracker starts idle time counter, and triggers <u>Idling Alarm</u> (<u>alm_code</u>=35), if counter exceeds <u>idle time</u>.</p>
Reply	<p>B33,<err_code></p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B33,600</p> <p>01 Set maximum idle time to 600s</p>
Retrieve	C04,B33

B34 – Setting Voltage Range for AD Port

Source	GPRS/COM/SMS
Description	<p>B34,<index>,<min_volt>,<max_volt>,<filter-option></p> <p>01 index: AD port index, value 1, which corresponds to AD1</p> <p>02 min_volt: AD port voltage when external input is 0%, unit V</p> <p>03 max_volt: AD port voltage when external input is 100%, unit V</p> <p>04 filter-option: filter option for AD sample data</p> <p><u>filter-option</u>==0 (default): When external power exists, sample AD data and upload</p>

	<p>real-time; When external power disconnected, keeping the last sample value, and upload to server</p> <p><i>filter-option</i>==1: When ACC ON, sample AD data and upload real-time; When ACC OFF (maybe external power exists), keeping the last sample value, and upload to server</p> <p><i>filter-option</i>==2: upload AD sample data real-time, ignoring ACC and external power status</p> <p>05 Default value for AD input</p> <table border="1"> <thead> <tr> <th>port</th> <th>min_volt/V</th> <th>max_volt/V</th> <th>filter-option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>AD1</td> <td>0</td> <td>5</td> <td>0</td> <td>Get sample data according to external power status</td> </tr> </tbody> </table>	port	min_volt/V	max_volt/V	filter-option	Description	AD1	0	5	0	Get sample data according to external power status
port	min_volt/V	max_volt/V	filter-option	Description							
AD1	0	5	0	Get sample data according to external power status							
Reply	<p>B34,<err_code></p> <p>01 err_code: procession error code.</p> <p> OK – Succeed.</p> <p> UNSUPPORT – Command not supported.</p> <p> FAILED – Procession failed.</p>										
Example	<p>B34,1,0,5.0</p> <p>01 Setting voltage range of AD1 to [0,5]V, getting sample data when external power exist, keeping sample data when external power disconnected</p>										
Retrieve	C04,B34,<index>										

B37 – Setting Digital Temperature Number

Source	GPRS/COM/SMS
Description	<p>B37</p> <p>01 Tracker supports multiple digital temperature sensors; When more than one sensors are installed, it is suggested to set sensor's number.</p> <p>02 When only one sensor is installed, tracker uses default #1 as sensor's number</p> <p>03 Method to set sensor's number:</p> <p> a Connect one sensor to tracker, send B37 command, tracker set sensor's number automatically, and reply setting result in command's reply</p> <p> b Disconnect the sensor, whose number has been set; Connect another sensor to tracker, use B37 command to set newly added sensor's number</p> <p> c Repeat the operation above, if there are more sensor</p> <p> d NOTE: When setting sensor's number, only one sensor is allowed to connect to tracker</p> <p>04 When sensors' numbers are set, tracker will arrange temperature data in the setting sequence</p> <p>05 It is suggested to reset number, when some sensors are removed.</p>
Reply	<p>B37,<t_sensor_sn></p> <p>01 t_sensor_sn: Sensor's number which is set automatically</p> <p> [1,4] – Setting succeed, the value is the sensor's number</p> <p> [FULL] – The number of sensors exceed</p>

	FAILED – Setting failed, error connection, or more than one sensor are connected
Example	
Retrieve	UNSUPPORT

B38 – Setting High/Low Temperature Alarm

Source	GPRS/COM/SMS
Description	<p>B38,<t_sensor_sn>,<high_temp>,<low_temp></p> <p>01 t_sensor_sn: sensor's number, refer to B37 command; When one sensor is installed, <u>t_sensor sn==1</u></p> <p>02 high_temp: High temperature threshold, unit °C; If this field is empty, high temperature alarm is disabled.</p> <p>03 low_temp: Low temperature threshold, unit °C; If this field is empty, Low temperature alarm is disabled.</p> <p>04 When <u>t_sensor sn</u>, <u>high temp</u>, <u>low temp</u> fields are empty, all sensors' high/low temperature alarm are disabled.</p> <p>05 Refer to Appendix-A for <u>alm-code</u> and <u>alm-para</u> of high/low temperature alarm</p>
Reply	<p>B38,<err_code></p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B38,1,-10,-20</p> <p>01 Setting #1 sensor's parameters, high temperature threshold: -10°C, low temperature threshold: -20°C</p> <p>B38,1,-10</p> <p>01 Setting #1 sensor's parameters, high temperature threshold: -10°C, low temperature threshold: disable</p> <p>B38,1,, -20</p> <p>01 Setting #1 sensor's parameters, high temperature threshold: disable, low temperature threshold: -20°C</p> <p>B38,1</p> <p>01 Disable #1 sensor's high and low temperature alarm</p>
Retrieve	C04,B38,<t_sensor_sn>

B39 – Delete Digital Temperature Sensor

Source	GPRS/COM/SMS
--------	--------------

Description	B39,<t_sensor_sn> 01 When multiple sensors are installed, and some ones need to be removed, this command can be used. In actual usage, remove sensor first, then send B39 command 02 t_sensor_sn: sensor's number, refer to B37 command; When one sensor is installed, t_sensor_sn=1; When <u>t_sensor_sn</u> field is empty, remove all sensors
Reply	B39,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	
Retrieve	UNSUPPORT

B40 – Retrieve Temperature Sensor Data

Source	GPRS/COM/SMS
Description	B40 01 The command is used for testing after installation. Tracker replies all sensors' data.
Reply	B40,<tsensor1_temp> <tsensor2_temp>.... <tsensorN_temp> 01 The reply indicates the number of sensor, and sensors' data 02 N: The number of digital temperature sensor 03 tsensor[1,N]_temp: Temperature data, unit °C; Data is arranged by the number set by B37; ' ' is used to separate neighboring data
Example	
Retrieve	UNSUPPORT

B42 – Authorizing iButton Tag(s)

Source	GPRS/COM/SMS
Description	B42,<rfdid_num1>,<rfdid_num2>...<rfdid_numN> 01 rfdid_num[1,N]: iButton tag number to be authorized. For iButton tag, whose number is hexadecimal, use '#' in front 02 To authorize iButton tags in batches, send B42 only, with <u>rfdid_num1</u> , <u>rfdid_num2</u> ... <u>rfdid_numN</u> empty. After parsed the command, tracker will regard all read tags as authorized ones in 3 minutes. During this 3 minutes, tracker will not generate "Login", "Log Out" or "Illegal Login" alarm when tag(s) read. 03 Refer to Appendix A for <u>alm-code</u> of "Login", "Log Out" and "Illegal Login". 04 After authorized tag(s) set, tracker will generate "Login", "Log Out" or "Illegal Login" alarm when tag read; Refer to user guide for detail. 05 If no tag(s) authorized, tracker will not generate "Illegal Login".
Reply	B42,<err_code> 01 err_code: procession error code.

	<p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B42,1234567,1234568,1234569</p> <p>01 Authorize 3 iButton tags, whose number 1234567,1234568,1234569</p> <p>B42,1234567,1234568,#1234569</p> <p>01 Authorize 3 iButton tags, whose number 1234567,1234568,0x1234569</p> <p>B42</p> <p>01 Start batch tags authorizing, tracker regards tags, which are read in the following 3 minutes, as authorized ones.</p>
Retrieve	UNSUPPORT

B43 – Delete Authorized iButton Tag(s)

Source	GPRS/COM/SMS
Description	<p>B43,<ALL>/<rfid_num1>,<rfid_num2>...<rfid_numN></p> <p>01 rfid_num[1,N]: iButton tag number to be deleted. For iButton tag, whose number is hexadecimal, use '#' in front</p> <p>02 B43,ALL: Delete all authorized tag(s).</p> <p>03 To delete tags in batches, send B43 only, with <i>rfid_num1</i>, <i>rfid_num2</i>...<i>rfid_numN</i> empty, tracker will delete tags, which are read in 3 minutes. During this 3 minutes, tracker will not generate "Login", "Log Out" or "Illegal Login" alarm when tag(s) read.</p>
Reply	<p>B43,<err_code></p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B43,1234567,1234568,1234569</p> <p>01 Delete 3 authorized RFID tags, whose number 1234567, 1234568, 1234569.</p> <p>B43,1234567,1234568,#1234569</p> <p>01 Delete 3 authorized RFID tags, whose number 1234567, 1234568, 0x1234569.</p> <p>B43</p> <p>01 Start batch operation, tracker delete tags, which are read in the following 3 minutes.</p>
Retrieve	UNSUPPORT

B44 – Retrieve iButton Tag(s) Authorization

Source	GPRS/COM/SMS
--------	--------------

Description	B44,<rfid_num1>,<rfid_num2>...<rfid_numN> 01 rfid_num[1,N]: iButton tag number to be retrieved. For iButton tag, whose number is hexadecimal, use '#' in front 02 Maximally, five tags are support in the retrieving operation
Reply	B44,<rfid_num1>:<aut1>,<rfid_num2>:<aut2>,....<rfid_numN>:<autN> 01 rfid_num[1,N]: iButton tag number to be retrieved. 02 aut[1,N]: Authorization status, 0~unauthorized, 1~ authorized
Example	
Retrieve	UNSUPPORT

B45 – RFID/iButton/Fingerprint Optional Function

Source	GPRS/COM/SMS
Description	B45,<acc-off-logout>,<buz-tip>,<acc-on-no-logout> 01 acc-off-logout: 1(default) – Force logout When ACC OFF; 0—Keeping login status when ACC OFF. After setting <u>acc-off-logout==1</u> , tracker will set current status to logout, and trigger “Log out” alarm when ACC OFF 02 buz-tip: Enable/Disable buzzer function for reminder function; 1—Enable, 0—Disable. Tracker will beep for reminder under below condition: a Under logout status, when ACC ON, buzzer beeps to remind swiping card to log in b Log in, buzzer beeps once c Log out, buzzer beeps twice 05 acc-on-no-logout: 1 (default) – Tracker keeps login status during ACC ON period; 0—Tracker will generate logout alarm even under ACC ON condition. <u>acc-on-no-logout==1</u> : Tracker does noting when swiping the same card, while generates “Log in” alarm when swiping different card, with new card ID in GPRS package <u>acc-on-no-logout==0</u> : Tracker generates “Log out” alarm when swiping the same card, while generates “Log out” alarm with old card ID, “Log in” alarm with new ID
Reply	B45,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	
Retrieve	C04,B45

B46 – Setting Passenger Mode for RFID/iButton/Fingerprint

Source	GPRS/COM/SMS
Description	B46,<enable>,<filter-tmr>,<keeping-tmr>

	<p>01 Tracker supports two working mode, driver management and passenger mode, when using RFID/iButton/finger. B46 command is use to set passenger mode.</p> <p>02 enable: 0~Disable(default); 1~Enable</p> <p>03 filter-tmr: filtering time for repeating swiping, unit s, default 0s. During this period, tag ID will be uploaded once till <u>filter-tmr</u> timeout. When <u>filter-tmr==0</u>, no filtration to repeating tag ID</p> <p>04 keeping-tmr: tag ID keeping time, unit s; During this period, tag ID will be uploaded within each GPRS package; when <u>keeping-tmr==0</u>, tag ID will be uploaded once</p> <p>05 Working process of passenger mode</p> <p>a After tag swiped, tracker sends normal GPRS position data with tag ID during <u>keeping-tmr</u> period. And tag ID will be empty after <u>keeping-tmr</u> seconds</p> <p>b When the same tag swiped repeatedly, tracker distinguishes as one during <u>filter-tmr</u> second, and keeps sending GPRS package with tag ID during <u>keeping-tmr</u> seconds</p> <p>06 When setting passenger mode, GPRS data package is normal position one after tag swiped.</p>
Reply	<p>B46,<err_code></p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	
Retrieve	C04,B46

B80 – Setting Fuel Theft/Filling Alarm

Source	GPRS/COM/SMS
Description	<p>B80,<ad-idx>,<theft-percentage>,<filling -percentage>,<use-acc></p> <p>01 The command is used for AD fuel sensor, such as AS10; Besides, it is valid on regular tank only at present.</p> <p>02 ad-idx: AD channel which connects to fuel sensor, value 1/2; If <u>ad-idx==0</u>, disable fuel theft/filling function.</p> <p>03 theft-percentage: Fuel theft percentage, unit %, tracker will send alarm when the fuel level decrement exceeds the setting value. If <u>theft-percentage==0</u> or field empty, disable fuel theft alarm.</p> <p>04 filling-percentage: Fuel filling percentage, unit %, tracker will send alarm when the fuel level increment exceeds the setting value. If <u>filling-percentage==0</u> or filed empty, disable fuel filling alarm.</p> <p>05 use-acc: Whether tracker connects to ACC or not. To get better calculation result, it is suggested to connect IN2 to ACC. If <u>use-acc</u> field empty, by default, it is regarded that ACC connected.</p>
Reply	<p>B80,<err_code></p> <p>01 err_code: procession error code.</p>

	<p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B80,1,5</p> <p>01 Enable fuel theft alarm calculated based on AD1; When fuel level decrement exceed 5%, tracker sends theft alarm</p> <p>02 Disable fuel filling alarm</p> <p>03 IN2 connects to ACC</p>
Retrieve	C04,B80

B81 – Setting Fuel Level Alarm

Source	GPRS/COM/SMS
Description	<p>B81,<ad-idx>,<low-percentage>,<high-percentage></p> <p>01 The command is used for AD fuel sensor, such as AS10; Besides, it is valid on regular tank only at present.</p> <p>02 ad-idx: AD channel which connects to fuel sensor, value 1/2; If <u>ad-idx==0</u>, disable fuel level detection.</p> <p>03 low-percentage: Percentage of low fuel level, unit %, tracker will send alarm when the fuel level is lower than the setting value. If <u>low-percentage==0</u> or field empty, disable low fuel level detection.</p> <p>04 high-percentage: Percentage of high fuel level, unit %, tracker will send alarm when the fuel level is higher than the setting value. If <u>high-percentage==0</u> or filed empty, disable high fuel level detection.</p>
Reply	<p>B81,<err_code></p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B81,1,15,80</p> <p>01 Enable low and high fuel level detection calculated based on AD1</p> <p>02 When fuel level is lower than 15%, tracker sends alarm</p> <p>03 When fuel level is higher than 80%, tracker sends alarm</p>
Retrieve	C04,B81

B82 – Enable/Disable Fuel Consumption Statistics

Source	GPRS/COM/SMS
Description	<p>B82,<ad-idx>,<use-acc>,<add-theft>,<clear></p> <p>01 The command is used for AD fuel sensor, such as AS10; Besides, it is valid on regular tank only at present.</p> <p>02 ad-idx: AD channel which connects to fuel sensor, value 1/2; If <u>ad-idx==0</u>, disable fuel</p>

	<p>consumption statistics.</p> <p>03 use-acc: Whether tracker connects to ACC or not. To get better calculation result, it is suggested to connect IN2 to ACC. If <u>use-acc</u> field empty, by default, it is regarded that ACC connected.</p> <p>04 add-theft: 1-- The amount of oil reduced by theft is added to total fuel consumption (default); 0-- The amount of oil reduced by theft is excluded from total fuel consumption.</p> <p>05 clear: 0—Keep current fuel consumption data unchanged; 1—Clear current consumption data, and calculated from 0</p> <p>06 After fuel consumption statistics enabled, fuel consumption data is packed in <u>fuel_consume</u> field in GPRS protocol.</p>
Reply	<p>B82,<err_code></p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B82,1,1,1,1</p> <p>01 Enable fuel consumption statistics calculated based on AD1; tracker connects to ACC via IN2; All amount, including fuel theft amount, will be statistics into total consumption; After commands sent, tracker clear current consumption data, and re-calculates from 0.</p>
Retrieve	<p>C04,B82</p> <p>Reply: B82,<ad-idx>,<use-acc>,<add-theft></p>

B90 – Reset Tracker or Module

Source	GPRS/COM/SMS
Description	<p>B90,< select ></p> <p>01 select: option</p> <p>=1: Reset tracker.</p> <p>=2: Reset GPS module.</p> <p>=3: Reset GSM module.</p>
Reply	<p>B90,<err_code></p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>B90,1</p> <p>01 Reset tracker.</p>
Retrieve	UNSUPPORT

B91 – Setting Parameters to Default

Source	GPRS/COM/SMS
Description	B91 01 After command is set, all system parameters (except SMS password) are set to default.
Reply	B91,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B91
Retrieve	UNSUPPORT

B94 – Turn on/off LED Display

Source	GPRS/COM/SMS
Description	B94,<led-on> 01 led-on: 1--turn on LED, 0--turn off LED. 02 Default, <u>led-on</u> =1.
Reply	B94,<err_code> 01 err_code: procession error code. OK – Succeed. UNSUPPORT – Command not supported. FAILED – Procession failed.
Example	B94 01 Set LED to default: turn on.
Retrieve	C04,B94

B98 – Setting Lower Power Parameters

Source	GPRS/COM/SMS
Description	B98,<low_pwr_v>,<low_recovery_v>,<control> 01 The command is used to set the parameters of low external power alarm 02 low_pwr_v: Low power alarm voltage, unit V; When external power input is lower than <u>low_pwr_v</u> , tracker sends “Low Ext-Power” alarm, and cuts off power supply if <u>control==1</u> , in order to protect auto battery. 03 low_recovery_v: External power recovery voltage, unit V; When external power input is higher than <u>low_recovery_v</u> , it regards that external power is normal; tracker clears “Low Ext-Power” flag, and restore external power supply if <u>control==1</u> . 04 control: 1—cut off external power supply when external input is lower than <u>low_pwr_v</u> , and restore supply when external input higher than <u>low_recovery_v</u> , it is

	<p>used to protect auto battery; 0(default)—Disable auto battery protection.</p> <p>05 It is suggested to set parameters which (<i>low_recovery_v</i> – <i>low_pwr_v</i>) >= 0.5V</p> <p>06 Default settings for 12V or 24V auto battery, as below table:</p> <table border="1"> <thead> <tr> <th></th> <th>low_pwr_v</th> <th>low_recovery_v</th> </tr> </thead> <tbody> <tr> <td>12V Auto Battery</td> <td>11.5V</td> <td>12.5V</td> </tr> <tr> <td>24V Auto Battery</td> <td>23.5V</td> <td>24.5V</td> </tr> </tbody> </table>		low_pwr_v	low_recovery_v	12V Auto Battery	11.5V	12.5V	24V Auto Battery	23.5V	24.5V
	low_pwr_v	low_recovery_v								
12V Auto Battery	11.5V	12.5V								
24V Auto Battery	23.5V	24.5V								
Reply	<p>B98,<err_code></p> <p>01 err_code: procession error code.</p> <p> OK – Succeed.</p> <p> UNSUPPORT – Command not supported.</p> <p> FAILED – Procession failed.</p>									
Example	<p>B98,11.5,12.5</p> <p>01 Setting low external threshold to 11.5V, and recovery voltage to 12.5V, auto battery protection is disabled, tracker is always powered from external supply.</p> <p>B98,0,0,1</p> <p>01 Setting adaptive low external parameters, tracker judges voltage automatically, and cuts off when low external input.</p>									
Retrieve	C04,B98									

B99 – OTA using FTP Server

Source	GPRS/COM/SMS						
Description	<p>B99,<file_name>,<option>,<ftp_address>,<ftp_port>,<ftp_loginid>,<ftp_loginpwd>,<apn>,<apn_name>,<apn_pwd></p> <p>01 file_name: file name for OTA, should be “xxx.bin” format</p> <p>02 option: option for OTA, when the field empty, using default setting</p> <table border="1"> <thead> <tr> <th>option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0(default)</td> <td>Normal OTA, tracker check whether <i>file_name</i> match current version or not</td> </tr> <tr> <td>1</td> <td>Mandatory OTA, tracker doesn't check <i>file_name</i></td> </tr> </tbody> </table> <p>03 ftp_address: FTP server address, default 47.88.17.17</p> <p>04 ftp_port: FTP server port, default 21</p> <p>05 ftp_loginid, ftp_loginpwd: FTP login user-name and password, when fields empty, using default account on 47.88.17.17</p> <p>06 apn, apn_name, apn_pwd: APN setting for FTP connection, default, tracker using the same setting as <u>B01</u> command</p> <p>07 After <u>B99</u> command received, tracker matches <i>file_name</i> to current firmware version, and starts OTA according to result</p> <p>08 During OTA operation, tracker will disconnect from tracking server, stop timing uploading/photographing.</p> <p>09 The timeout for FTP OTA is 15mins, when exceed, tracker will restart automatically, and connect to tracking server</p>	option	Description	0(default)	Normal OTA, tracker check whether <i>file_name</i> match current version or not	1	Mandatory OTA, tracker doesn't check <i>file_name</i>
option	Description						
0(default)	Normal OTA, tracker check whether <i>file_name</i> match current version or not						
1	Mandatory OTA, tracker doesn't check <i>file_name</i>						

	10 External power connection is needed during OTA operation, it is used for tracking reboot after OTA finished
Reply	<p>B99,<err_str> 01 err_str: Error code, string format</p> <p>“Invalid BIN file” - <i>file_name</i> doesn’t match current firmware version “No ext-pwr, Please Connect in 15mins” – External power disconnect “The Same Version” – file_name has the same version to current firmware version “OK” – OTA start</p>
Example	<p>B99,S30-V1.09.bin 01 Start OTA, tracker will connect to 47.88.17.17:21, using default FTP account for file download</p> <p>B99,S30-V1.09.bin,1, 120.24.95.123,9208,klone,klone@@2017 01 Start OTA, tracker will connect to <u>120.24.95.123:9208</u>, and upgrade to <u>“S30-V1.09.bin”</u> 02 The login name and password of FTP server is <u>“klone”</u> and <u>“klone@@2017”</u></p>
Retrieve	

C01 – Retrieve Position Information

Source	COM/SMS/GPRS
Description	<p>C01 01 After command is set, tracker sends a position message. 02 When alarm detected, tracker sends alarm SMS with C01 format automatically, to all SOS number(s). 03 When command is sent via GPRS, tracker replies normal position data.</p>
Reply	<p>When command is sent via GPRS, the replied data is normal position package.</p> <p>When command is sent via SMS/COM <string_head>,yyyy-MM-dd hh:mm:ss, <spd>KM/h,<gprs_st>,<gps_fix>,EXPW:<PST> http://maps.google.com/maps?f=q&hl=en&q=loc:<Latitude>,<Longitude></p> <p>a string_head: SMS head string, for normal position data, <i>string_head</i> is empty, for alarm data, refer to Appendix-A for default string. b yyyy-MM-dd hh:mm:ss: current date & time, which is effected by B14 command setting. c spd: current speed, unit km/h. d gprs_st: GPRS link status, value: “Connected” or “Disconnected”. e gps_fix: GPS signal status, ‘A’-fixed, ‘V’-not fixed. f PST: Status of ext-power input, “ON” -- ext-power is connected, “OFF” -- ext-power is disconnected. g Latitude, Longitude: Latitude and longitude of last position point.</p>
Example	C01

Retrieve	UNSUPPORT
----------	-----------

C02 – Retrieve Firmware/Hardware Version, SN, IMEI

Source	GPRS/COM/SMS
Description	C02
Reply	<p>Uploading data format:</p> <p>C02,<IMEI>,<SN>,<fw_ver>,<hw_ver></p> <p>01 IMEI: IMEI of tracker.</p> <p>02 SN: Serial number of tracker.</p> <p>03 fw_ver: Firmware version.</p> <p>04 hw_ver: Hardware version.</p>
Example	C02
Retrieve	UNSUPPORT

C03 – Retrieve Supply Power Status

Source	GPRS/COM/SMS
Description	C03
Reply	<p>Uploading data format:</p> <p>C03,<extp_v>,<bat_v>,<bat_percentage></p> <p>01 extp_v: Voltage of ext-power, unit V. Charge supplier voltage for handheld tracker.</p> <p>02 bat_v: Voltage of internal battery.</p> <p>03 bat_percentage: Percentage of internal battery capacity.</p>
Example	C03
Retrieve	UNSUPPORT

C04 – Retrieve Parameter Setting

Source	GPRS/COM/SMS
Description	<p>C04,<cmd-code>,<query_para></p> <p>01 cmd-code: Command code to be retrieved.</p> <p>02 query_para: Query parameter; refer to chapters above for detail.</p>
Reply	<p>C04,<cmd>,<cmd-para></p> <p>01 cmd-code: The same as sending command.</p> <p>02 cmd-para: Retrieved parameter string, the same format as setting command described in the above chapters.</p>
Example	Refer to chapters above.
Retrieve	UNSUPPORT

C06 – Retrieve Basic Information of Tracker	
Source	GPRS/COM/SMS
Description	<p>C06</p> <p>01 Retrieve basic information of tracker in batch</p> <p>02 The command is commonly used for GPRS linkage lost debug</p>
Reply	<p>C06,<GID>,<ip>:<port>,<TCP/UDP>;APN:<apn>,<apn_user>,<apn_pwd>;EXT:<ext_p>,BAT:<bat_v>;B03:<base_int> ,<accoff_int>,<ns_int>;<ACC ON/OFF>,<Moving/STOP></p> <p>01 GID: Tracker ID for GPRS data, default IMEI</p> <p>02 ip, port: Server setting in tracker</p> <p>03 TCP/UDP: Transport protocol setting, string, value “TCP” / “UDP”</p> <p>04 apn, apn_user, apn_pwd: APN setting in tracker</p> <p>05 ext_p: Voltage of external power supply, unit V</p> <p>06 bat_v: Voltage of internal battery, unit V</p> <p>07 base_int, accoff_int, ns_int: GPRS uploading interval for normal situation, for ACC OFF, for parking status, which is the same as B03 setting</p> <p>08 ACC ON/OFF: Current ACC status, string, value “ACC ON” / “ACC OFF”</p> <p>09 Moving/STOP: Current motion status, string, value “Moving” / “STOP”</p>
Example	<p>Command: C06</p> <p>Reply:</p> <p>C06,861694033095389,47.88.35.165:10502,TCP;APN:CMNET,,;EXT:12.00V,BAT:4.17V;B03:100,0,0,ACC OFF,Stop</p>
Retrieve	UNSUPPORT

C08 – Retrieve Voltage on AD Input	
Source	GPRS/COM/SMS
Description	<p>C08,<rt-data></p> <p>01 Command is used to retrieve AD voltage</p> <p>02 rt-data: 1—Tracker replies real-time voltage on AD input; 0—Tracker replies voltage after filtration; Default 1</p> <p>03 When <u>rt-data==1</u>, sending command after AD voltage stable; When <u>rt-data==0</u>, waiting at least 1min after AD voltage stable, and then sending command for retrieving, this mode is suitable for the situation, where AD voltage is floating with environment (e.g., fuel sensor voltage under driving)</p> <p>04 The reply to C08 command is the actual voltage on AD port, and it is not effected by B34 command</p>
Reply	<p>C08,AD1:<ad1-voltage></p> <p>01 ad1-voltage: voltage on AD1 port, unit V</p>
Example	<p>Command: C08,0</p> <p>Reply : C08,AD1:3.76</p>
Retrieve	UNSUPPORT

S09 – Setting GPRS Heartbeat Interval	
Source	GPRS/COM/SMS
Description	<p>S09,<acc-on-interval>,<acc-off-interval></p> <p>01 Heartbeat package is independent from normal GPRS position one; Refer to “fifotrack A01 GPRS Protocol” for heartbeat package format</p> <p>02 acc-on-interval, acc-off-interval: Heartbeat interval for ACC ON and ACC OFF, unit: s; default <i>acc-on-interval</i>==0, <i>acc-off-interval</i>==0, which means heartbeat disabled</p> <p>03 When <i>acc-on-interval</i> or <i>acc-off-interval</i> is set to 0, heartbeat disabled for corresponding ACC status</p> <p>03 Heartbeat data will not be saved to blind buffer; When new heartbeat package generated, old and unsent one will be discarded</p>
Reply	<p>S09,<err_code></p> <p>01 err_code: procession error code.</p> <p>OK – Succeed.</p> <p>UNSUPPORT – Command not supported.</p> <p>FAILED – Procession failed.</p>
Example	<p>S09,180,300</p> <p>01 Setting heartbeat interval to 180s for ACC ON, and 300s for ACC OFF</p> <p>S09,0,300</p> <p>01 Setting heartbeat interval to 300s for ACC OFF, and disable heartbeat for ACC ON</p> <p>S09</p> <p>01 Disable heartbeat for both ACC ON and ACC OFF</p>
Retrieve	C04,S09

S13 – Switching A02 Package Format	
Source	GPRS/COM/SMS
Description	<p>S13,<type>,<tmrout>,<re-send-cnt></p> <p>01 Tracker supports two GPRS package format, <u>A01</u> and <u>A02</u>; <u>S13</u> command is used to switch the format</p> <p>02 type: Package format select, 0—<u>A01</u> format, 1—<u>A02</u> format</p> <p><u>A01</u> format: normal package format, no acknowledge needed from server</p> <p><u>A02</u> format: uolpad-acknowledge format, tracker wait for acknowledge for uploading confirmation; Re-send package if no acknowledge received</p> <p>03 tmrout: re-send timeout, unit s, default 60s; After <u>A02</u> package uploaded, tracker re-sends the same package after <i>tmrout</i> seconds if no acknowledge received</p> <p>04 re-send-cnt: Maximum package re-sending times; Tracker aborts package when exceeds <i>re-send-cnt</i> times; default 0, which means package will be uploaded always</p> <p>05 <i>tmrout</i>, <i>re-send-cnt</i> valid under <u>A02</u> mode</p>
Reply	<p>S13,<err_code></p> <p>01 err_code: procession error code.</p>

	OK – Succeed. UNSUPPORT – Command not supported. FAILED – Proccession failed.
Example	S13,1 01 Enable A02 format, tmrout and re-send-cnt use default setting (tmrout==60, re-send-cnt==0) 02 Tracker will upload package every 60s always if no acknowledge received
Retrieve	C04,S13

Appendix A – Alarm code and alarm parameter

The following table describes the relationship of *alm-code* and *alm-para* in GPS Position/Alarm data:

alm-code	alm-para	Description	SMS Head String
1	NULL	Distance tracking	Distance
2	NULL	Input1 active	SOS
3	NULL	Input1 inactive	IN1 Inactive
4	NULL	Input2 active	IN2
5	NULL	Input2 inactive	IN2 Inactive
14	Ext-power voltage, unit V	Ext-power low	Low Ext-Power
15	NULL	Ext-power lost	Ext-Power Cut
16	NULL	Ext-power re-connect	Ext-Power On
17	Battery voltage, unit V	Internal battery low	Low Battery
18	NULL	Speeding alarm	Speeding
23	NULL	Harsh accelerate	Harsh Accelerate
24	NULL	Harsh braking	Harsh Braking
27	NULL	Fatigue driving	Fatigue Driving
28	NULL	Fatigue relieve	Fatigue Relieve
33	Hexadecimal character: bit[7:4]: geo-fence type: 0 - Circle fence 1 - Polygon fence bit[3:0]: index of fence	Exit geo-fence	Exit Fence
34	The same as "Exit geo-fence"	Enter geo-fence	Enter Fence
35	NULL	Idling Alarm	Idling Alarm
37	NULL	Login	Login
38	NULL	Log Out	Log Out
39	NULL	Illegal Login	Illegal Login
40	sn sn: Digital temperature sensor's number, refer to B37 command	High Temperature	High Temperature
41	sn sn: Digital temperature sensor's number, refer to B37 command	Low Temperature	Low Temperature
44	NULL	Fuel Theft Alarm	Fuel Theft
45	NULL	Fuel Filling Alarm	Fuel Filling
46	NULL	Low Fuel Level Alarm	Fuel Level Low



47	NULL	High Fuel Level Alarm	Fuel Level High
----	------	-----------------------	-----------------